C2178

14401

N618
Speed control On/
Off switch

* Cummins

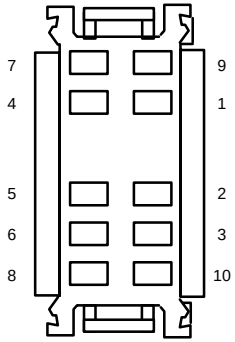

F10135

Pin	Circuit	Circuit function
1	–	not used
2	151 (LB/BK)	Speed control switch, input
3	21 (DK/LG)	Powertrain Control Module (PCM) (12A650) – Flexible fuel sensor
	*1203 (BK/LB)	Ground
4	–	not used
5	–	not used
6	–	not used
7	19 (LG/RD)	Illumination, Power
8	19 (LG/RD)	Illumination, Power
9	57 (BK)	Ground
10	57 (BK)	Ground

C2179a

14401

A417
Trax module

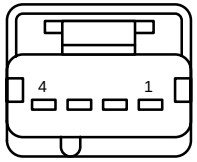

F04143

Pin	Circuit	Circuit function
1	1356 (LG/VT)	TX, signal
2	–	not used
3	1357 (LB /YE)	signal, return
4	–	not used

C2179b

14401

A417
Trax module

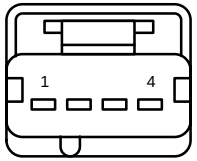

F04143

Pin	Circuit	Circuit function
1	29 (YE/WH)	Fuel pump/fuel gauge sender
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
4	–	not used

C2180a

14401

A418
Warning chime
module

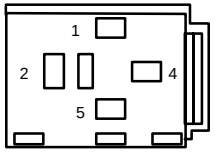

F05159

Pin	Circuit	Circuit function
1	–	not used
2	54 (LG/YE)	Voltage supplied at all times (overload protected)
3	–	not used
4	–	not used
5	3603 (RD)	to, Parking brake switch (15A851)

C2180b

14401

A418
Warning chime
module

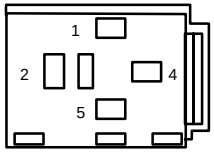

F05159

Pin	Circuit	Circuit function
1	–	not used
2	295 (LB/PK)	Voltage in Run (overload protected)
3	–	not used
4	535 (LB/RD)	to, Brake differential pressure switch
5	–	not used