C270b

14401

Central Junction
Box (CJB) (14A068)

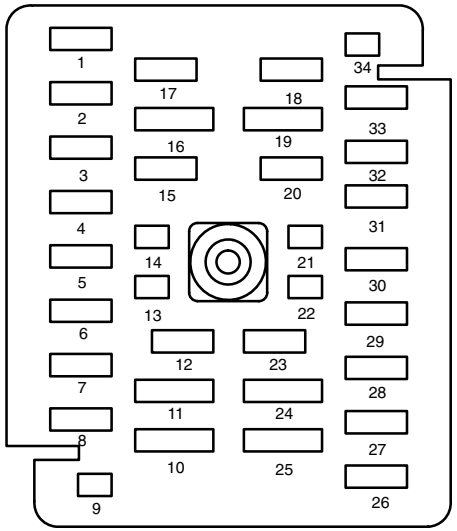

F34011

@* J2373
@** J8
@*** J2374

Pin	Circuit	Circuit function
1	533 (TN/RD)	Voltage in Run (overload protected)
	294 (WH/LB)	Voltage in Run (overload protected)
2	188 (WH/BK)	Hot with Low Beams on
3	–	not used
4	1000 (RD/BK)	Voltage supplied in Start (overload protected)
	**1000 (RD/BK)	Voltage supplied in Start (overload protected)
5	–	not used
6	160 (DB/WH)	Headlamp, left (13008), (Low beam lamp feed)
7	13 (RD/BK)	Power, Hot with Low Beams on
8	296 (WH/VT)	Voltage in Run (overload protected)
9	–	not used
10	991 (TN/LB)	Master window adjust switch (14529), feed, Down
11	1052 (TN/BK)	Voltage supplied at all times (overload protected)
12	687 (GY/YE)	Voltage in Run (overload protected)
13	–	not used
14	–	not used
15	161 (DG/OG)	Headlamp, right (13008), (Low beam lamp feed)
16	964 (DB/LG)	Voltage supplied in Start and Run (overload protected)
17	–	not used
18	32 (RD/LB)	Voltage supplied in Start (overload protected)

Pin	Circuit	Circuit function
19	*481 (GY/YE)	Voltage supplied in Start (overload protected)
	***325 (DB/OG)	Voltage supplied in Start (overload protected)
	***325 (DB/OG)	Voltage supplied in Start (overload protected)
20	950 (WH/BK)	Voltage in Run or Accessory (overload protected)
21	679 (GYBK)	Vehicle Speed Sensor (VSS) +
22	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
23	–	not used
24	57 (BK)	Ground
25	1001(WH/YE)	Voltage supplied at all times (overload protected)
26	–	not used
27	–	not used
28	995 (GY)	One–Touch Down Switch, signal
29	*33 (WH/PK)	Voltage supplied in Start (overload protected)
	***325 (DB/OG)	Voltage supplied in Start (overload protected)
30	–	not used
31	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
32	705 (LG/OG)	Battery saver relay, switched power
33	14 (BN)	Hot in Park or Head
34	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)