24-11 ENGINE CONTROLS (NATURAL GAS)

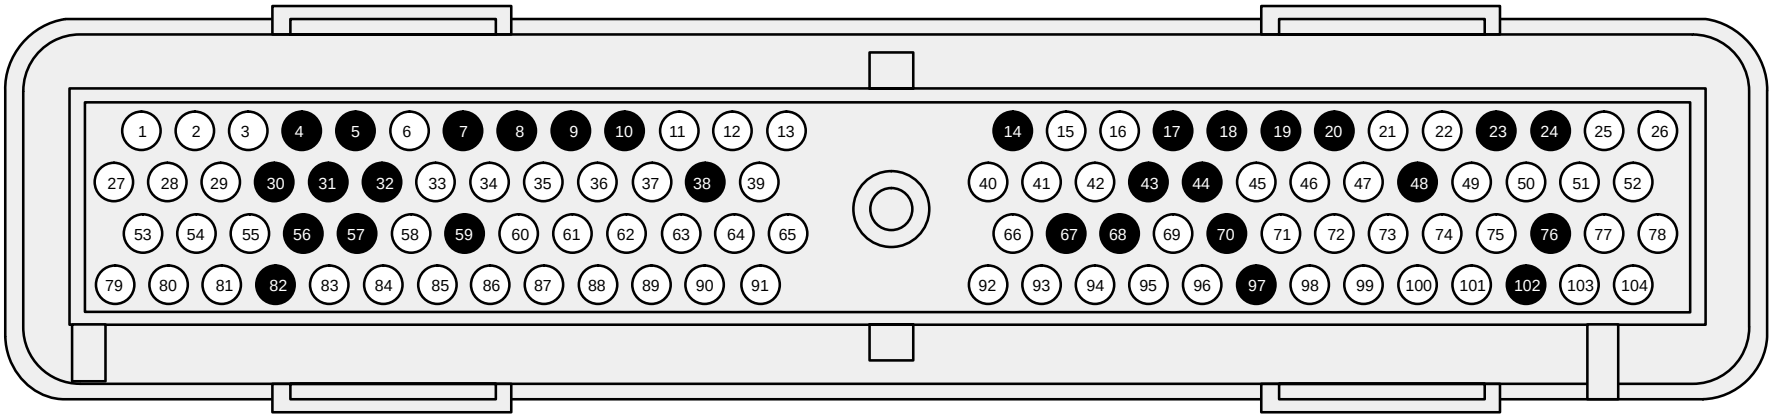

C185 (GRAY)

POWERTRAIN CONTROL MODULE (PCM)

NATURAL GAS

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil on Plug #6	22	139 (GY/YE)	Crankshaft Position (CKP) Sensor (–)
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL)	23	–	NOT USED
3	570 (BK/WH)	Power Ground	24	–	NOT USED
4	–	NOT USED	25	57 (BK)	Ground
5	–	NOT USED	26	1024 (LG/WH)	Coil on Plug #1
6	237 (OG/YE)	Shift Solenoid A	27	1021 (LG/YE)	Coil on Plug #5
7	–	NOT USED	28	229 (RD/OG)	Cooling Fan Relay Control
8	–	NOT USED	29	224 (TN/WH)	Transmission Control Switch (TCS)
9	–	NOT USED	30	–	NOT USED
10	–	NOT USED	31	–	NOT USED
11	315 (VT/OG)	Shift Solenoid B	32	–	NOT USED
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	33	676 (PK/OG)	Vehicle Speed Sensor (VSS) (+)
13	107 (VT)	Flash EPROM Power Supply (FEPS)	34	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)
14	–	NOT USED	35	392 (RD/LG)	Right Heated Oxygen Sensor (HO2S) #12
15	915 (PK/LB)	SCP Data Bus (–)	36	968 (TN/LB)	Mass Air Flow (MAF) Signal Return
16	914 (TN/OG)	SCP Data Bus (+)	37	923 (OG/BK)	Transmission Fluid Temperature (TFT)
17	–	NOT USED	38	–	NOT USED
18	–	NOT USED	39	743 (GY)	Intake Air Temperature (IAT) Sensor
19	–	NOT USED	40	238 (DG/YE)	Fuel Solenoid Valve
20	–	NOT USED	41	347 (BK/YE)	A/C Cycling Switch
21	138 (BK/VT)	Crankshaft Position (CKP) Sensor (+)	42	39 (RD/WH)	Temperature Gauge to Temperature Sending Unit

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
43	–	NOT USED	74	557 (BN/YE)	Fuel Injector #3
44	–	NOT USED	75	555 (TN)	Fuel Injector #1
45	1270 (OG/RD)	Cylinder Head Temperature (CHT) Indicator Lamp	76	–	NOT USED
46	639 (LG/VT)	Cooling Fan High	77	570 (BK/WH)	Power Ground
47	360 (BN/VT)	EGR Vacuum Regulator (EVR) Solenoid	78	1027 (PK/LB)	Coil on Plug #7
48	–	NOT USED	79	1029 (WH/RD)	Coil on Plug #8
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)	80	926 (LB/OG)	Fuel Pump Relay Control
50	1143 (WH/BK)	Digital Transmission Range (DTR) Sensor (TR4)	81	925 (WH/YE)	Electronic Pressure Control (EPC)
51	570 (BK/WH)	Power Ground	82	–	NOT USED
52	1028 (WH/PK)	Coil on Plug #3	83	264 (WH/LB)	Idle Air Control (IAC) Valve
53	1030 (DG/VT)	Coil on Plug #4	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor Input
54	126 (VT/YE)	Torque Converter Clutch (TCC) Solenoid	85	282 (DB/OG)	Camshaft Position (CMP) Sensor Input
55	554 (YE/BK)	B+ Keep Alive Power	86	1154 (WH/BK)	Cooling Fan Relay Feed
56	–	NOT USED	87	94 (RD/BK)	Left Heated Oxygen Sensor (HO2S) #21
57	–	NOT USED	88	967 (LB/RD)	Mass Air Flow (MAF) Input
58	679 (GY/BK)	Vehicle Speed Sensor (VSS) (–)	89	355 (GY/WH)	Throttle Position (TP) Sensor Input
59	–	NOT USED	90	351 (BN/WH)	Reference Voltage
60	74 (GY/LB)	Right Heated Oxygen Sensor (HO2S) #11	91	359 (GY/RD)	Signal Return
61	393 (VT/LG)	Left Heated Oxygen Sensor (HO2S) #22	92	511 (LG)	Brake Pedal Position (BPP) Input
62	225 (BK/YE)	Engine Fuel Temperature (EFT-A) Sensor	93	387 (RD/WH)	HO2S Heater Voltage Monitor #1
63	141 (RD/VT)	Injection Pressure (IP) Sensor	94	388 (YE/LB)	HO2S Heater Voltage Monitor #2
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3)	95	389 (WH/BK)	HO2S Heater Voltage Monitor #3
65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE)	96	390 (TN/YE)	HO2S Heater Voltage Monitor #4
66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor	97	–	NOT USED
67	–	NOT USED	98	562 (LB)	Fuel Injector #8
68	–	NOT USED	99	560 (LG/OG)	Fuel Injector #6
69	331 (PK/YE)	A/C WOT Cutout Relay	100	558 (BN/LB)	Fuel Injector #4
70	–	NOT USED	101	556 (WH)	Fuel Injector #2
71	361 (RD)	Power (Hot in Start or Run)	102	–	NOT USED
72	561 (TN/RD)	Fuel Injector #7	103	570 (BK/WH)	Power Ground
73	559 (TN/BK)	Fuel Injector #5	104	1026 (PK/WH)	Coil on Plug #2