C4040

14A583

Liftgate glass actuator

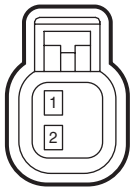

XR3T-14A464-BA (F)

Pin	Circuit	Circuit Function
1	84 (VT/YE)	Decklid solenoid feed
2	1205 (BK)	General ground (type 4 ground)

C4041

14A488

Joint connector 4

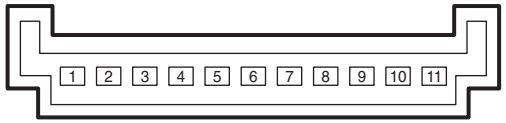

F4SB-14417-CA (F)

Pin	Circuit	Circuit Function
1	—	not used
2	—	not used
3	—	not used
4	1205 (BK)	General ground (type 4 ground)
5	1205 (BK)	General ground (type 4 ground)
6	1205 (BK)	General ground (type 4 ground)
7	—	not used
8	1205 (BK)	General ground (type 4 ground)
9	—	not used
10	—	not used
11	1205 (BK)	General ground (type 4 ground)

C4082

14A488

Antenna gain module

E6EB-14489-FA (F)

Pin	Circuit	Circuit Function
1	1678 (WH/VT)	Fused accessory radio feed

C4091

14A583

Liftgate disarm switch

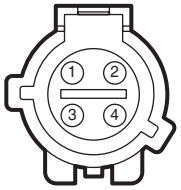

F4TB-14A464-AJA (M)

Pin	Circuit	Circuit Function
1	—	not used
2	25 (DG/VT)	Anti-theft switch disarm
3	1205 (BK)	General ground (type 4 ground)
4	—	not used