C420e

14A005

A212
Rear Electronic
Module (REM)

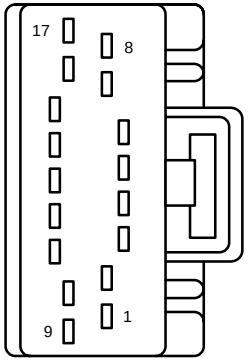

F17001

Pin	Circuit	Circuit function
1	31S-LG21 (BK/GN)	Ground, Switched
2	31S-LG14 (BK/OG)	Ground, Switched
3	31S-LG12 (BK/YE)	Ground, Switched
4	31S-LG19 (BK/BU)	Ground, Switched
5	31S-LF4 (BK/BU)	Ground, Switched
6	31S-LF2 (BK/BU)	Ground, Switched
7	–	not used
8	–	not used
9	31S-LG9 (BK/GN)	Ground, Switched
10	31S-LG16 (BK/RD)	Ground, Switched
11	–	not used
12	–	not used
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	31S-LG6 (BK/YE)	Ground, Switched

C420f

14A005

A212
Rear Electronic
Module (REM)

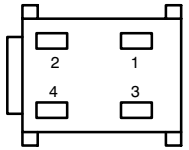

F04085

Pin	Circuit	Circuit function
1	35-AJ13 (VT/BU)	Switched between: Battery voltage, Ground or Open
2	34-AJ13 (BU/RD)	Switched between: Battery voltage, Ground or Open
3	31-DK30A (BK/OG)	Ground
4	30-DK30A (RD/OG)	Voltage supplied at all times (not overload protected)