## Duratec–VE

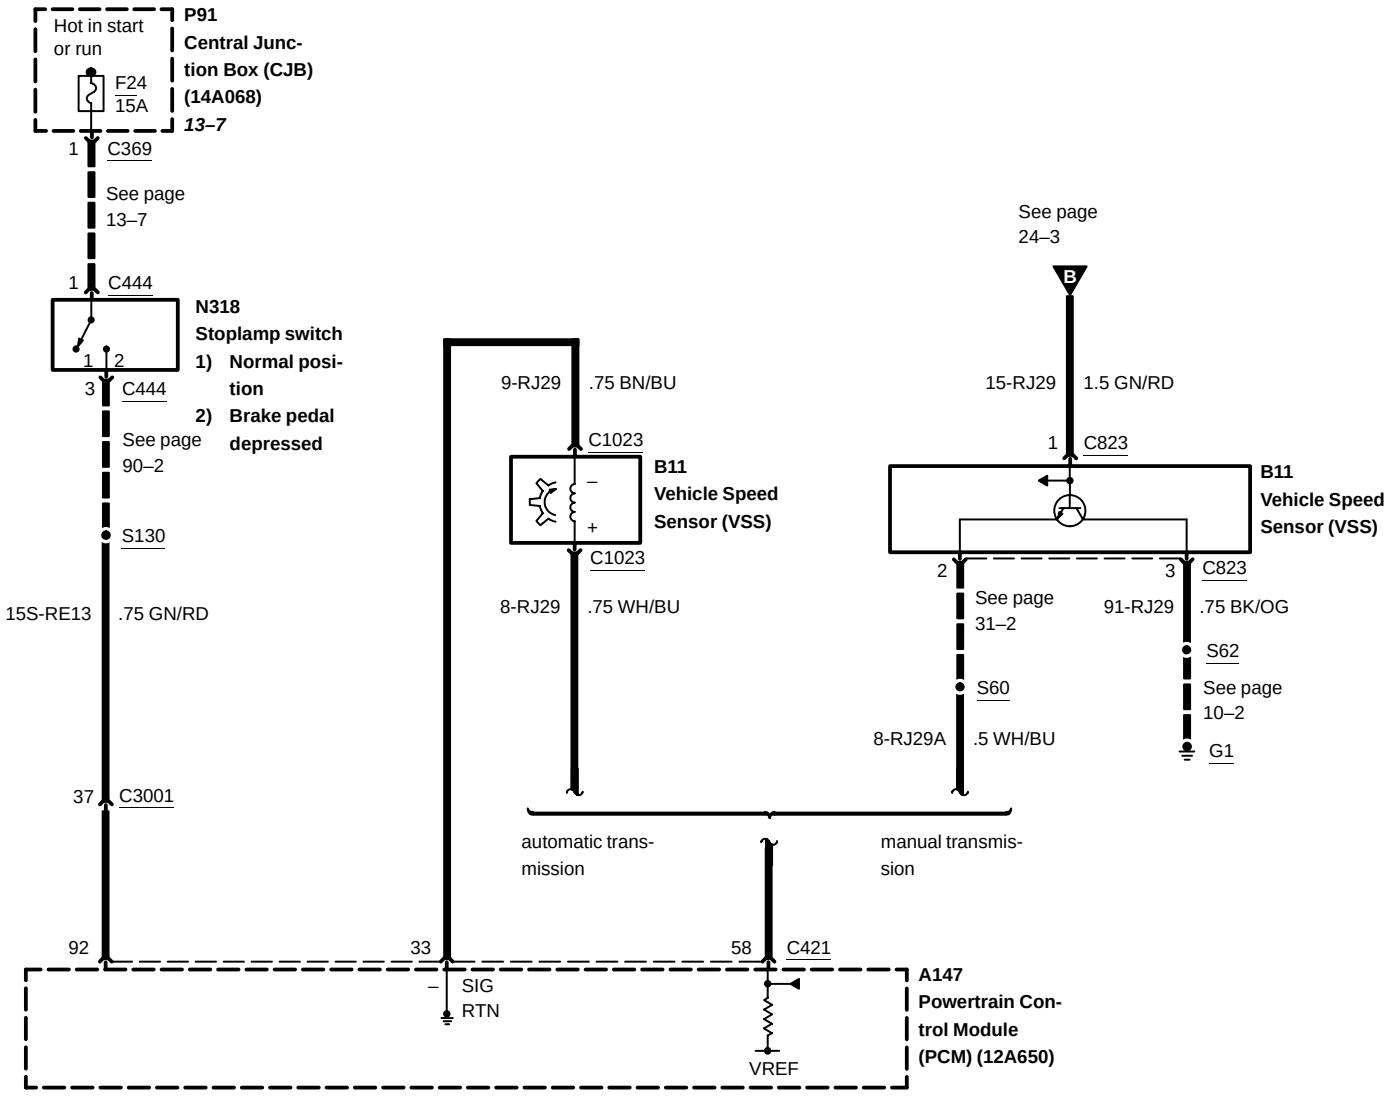
Hot in start or run
F24
15A
P91
Central Junction Box (CJB) (14A068)
13–7
1
C369
See page 13–7
1
C444
N318
Stoplamp switch
1) Normal position
2) Brake pedal depressed
1
2
3
C444
See page 90–2
S130
15S-RE13
.75 GN/RD
37
C3001
9-RJ29
.75 BN/BU
C1023
B11
Vehicle Speed Sensor (VSS)
C1023
8-RJ29
.75 WH/BU
See page 24–3
B
15-RJ29
1.5 GN/RD
1
C823
B11
Vehicle Speed Sensor (VSS)
2
3
C823
See page 31–2
91-RJ29
.75 BK/OG
S62
See page 10–2
G1
S60
8-RJ29A
.5 WH/BU
automatic transmission
manual transmission
92
33
58
C421
SIG RTN
VREF
A147
Powertrain Control Module (PCM) (12A650)