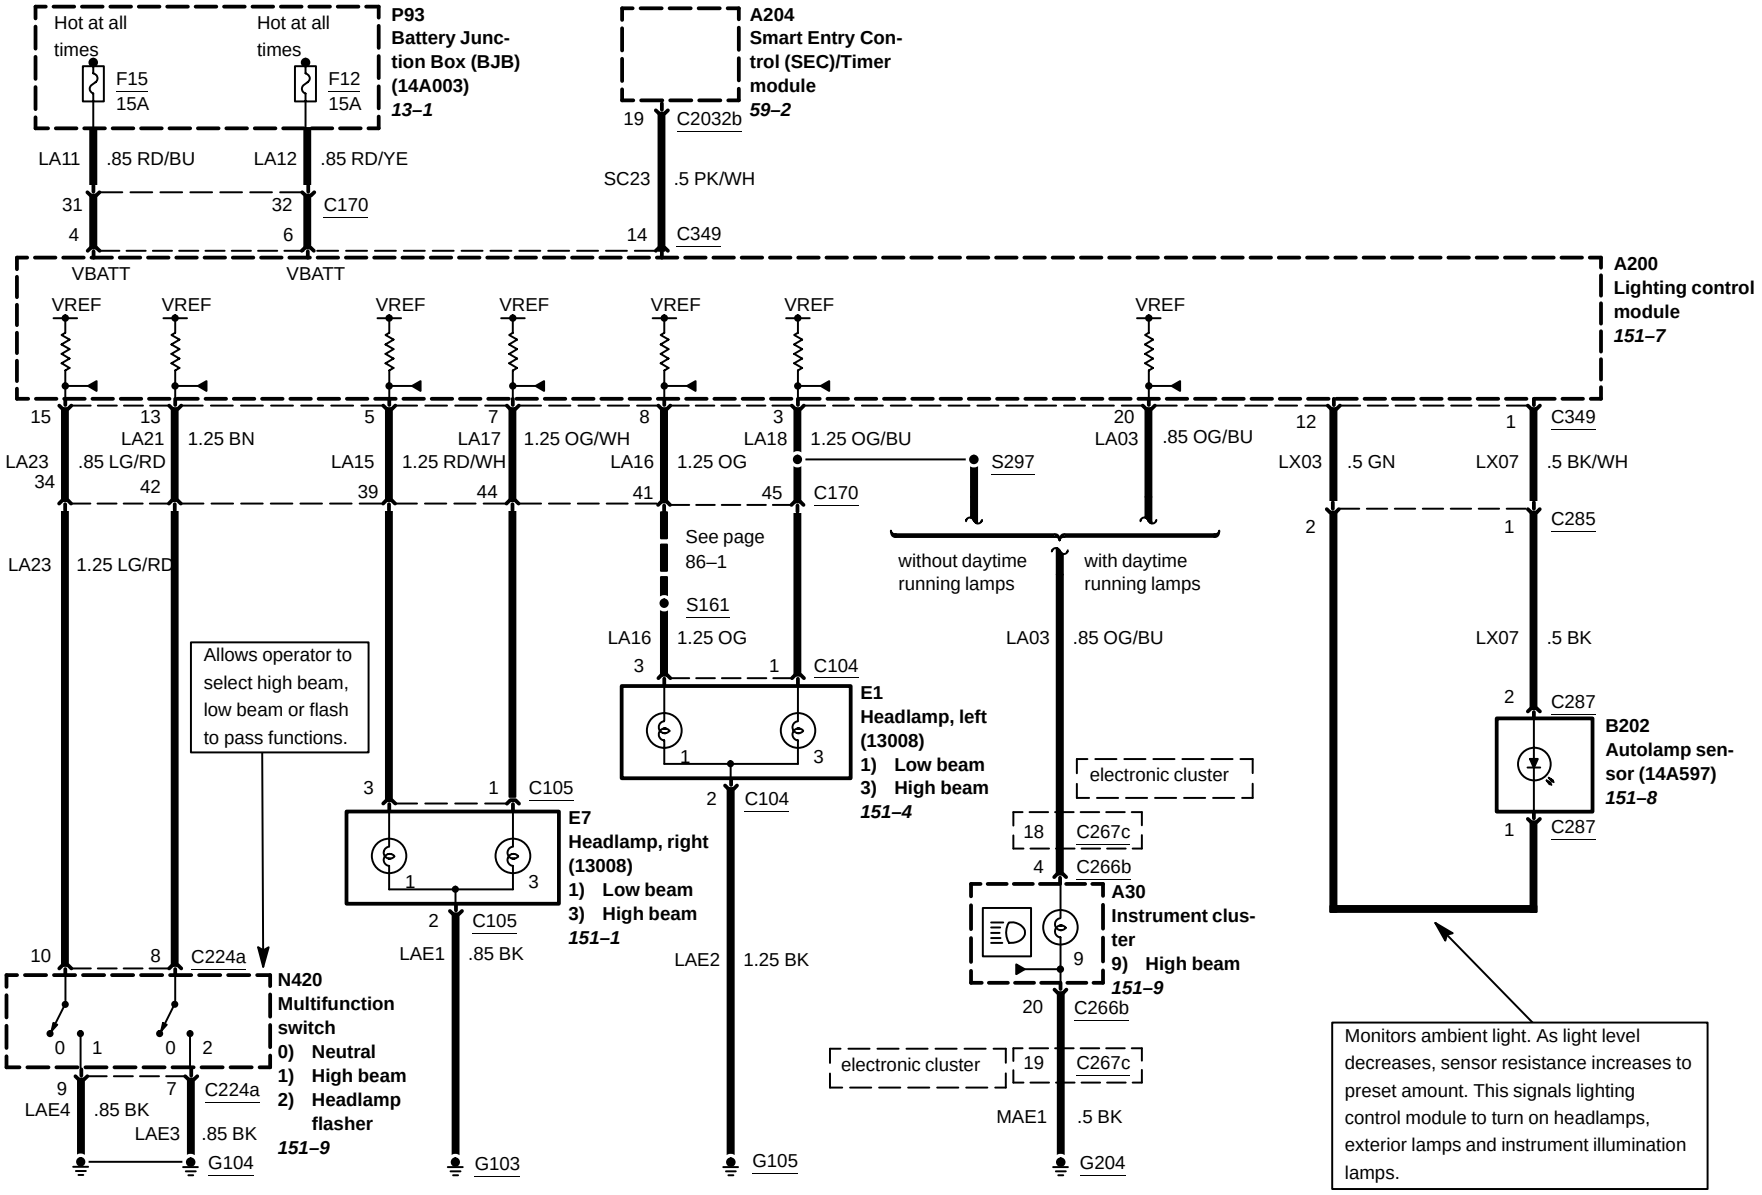
P93
Battery Junction Box (BJB) (14A003)
13–1
Hot at all times
F15 15A
F12 15A
LA11 .85 RD/BU
LA12 .85 RD/YE
C170
VBATT
A204
Smart Entry Control (SEC)/Timer module
59–2
C2032b
SC23 .5 PK/WH
C349
A200
Lighting control module
151–7
VREF
LA23 .85 LG/RD
LA21 1.25 BN
LA15 1.25 RD/WH
LA17 1.25 OG/WH
LA16 1.25 OG
LA18 1.25 OG/BU
LA03 .85 OG/BU
S297
without daytime running lamps
with daytime running lamps
LX03 .5 GN
LX07 .5 BK/WH
C285
LX07 .5 BK
C287
B202
Autolamp sensor (14A597)
151–8
See page 86–1
S161
C104
E1
Headlamp, left (13008)
1) Low beam
3) High beam
151–4
C105
E7
Headlamp, right (13008)
1) Low beam
3) High beam
151–1
Allows operator to select high beam, low beam or flash to pass functions.
C224a
N420
Multifunction switch
0) Neutral
1) High beam
2) Headlamp flasher
151–9
LAE4 .85 BK
LAE3 .85 BK
G104
LAE1 .85 BK
G103
LAE2 1.25 BK
G105
electronic cluster
C267c
C266b
A30
Instrument cluster
9) High beam
151–9
MAE1 .5 BK
G204
Monitors ambient light. As light level decreases, sensor resistance increases to preset amount. This signals lighting control module to turn on headlamps, exterior lamps and instrument illumination lamps.