C1120

12B637

B43
Crankshaft position sensor (6C315)

F02371

Pin	Circuit	Circuit function
1	139 (GY/YE)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) –
2	138 (BK/PK)	Powertrain Control Module (PCM) (12A650) – Crankshaft position sensor (6C315) +

C1189

12B637

B8
Throttle Position Sensor (TPS) (9B989)

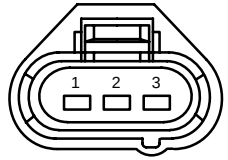

F03171

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
3	351 (BN/WH)	Reference, voltage

C1159

14290

E27
Engine compartment lamp

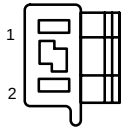

F02071

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C1196

12B637

U1
Ignition transformer capacitor

F01031

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C1179

14290

A305
Air suspension compressor assembly

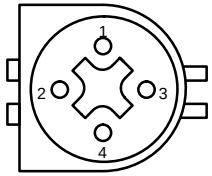

F04213

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	57 (BK)	Ground
3	421 (PK)	Air suspension compressor assembly, Vent solenoid, to, Air suspension module (3C142)
4	538 (GY/RD)	High speed cooling fan relay, switched power