C367

14C693

A155
Side air bag module, left

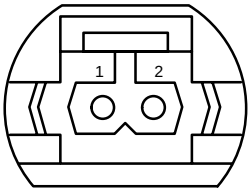

F02075

Pin	Circuit	Circuit Function
1	31S-JA37 (BK/GN)	Ground, Switched
2	30S-JA37 (RD/GN)	Voltage supplied at all times (not overload protected), Switched

C368

14C693

M230
Driver seat backrest motor

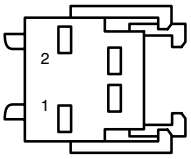

F04141

Pin	Circuit	Circuit Function
1	32-AH36 (WH/RD)	Switched between: Battery voltage, Ground or Open
2	33-AH36 (YE/RD)	Switched between: Battery voltage, Ground or Open

C372

14B719

B222
Driver memory seat horizontal sensor

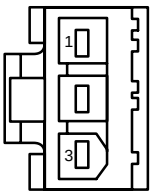

F03111

Pin	Circuit	Circuit Function
1	7-AH26 (YE/RD)	Voltage D.C. supplied at all times (sensor)
2	8-AH26 (WH/RD)	Sensor signal
3	9-AH26 (BN/RD)	Sensor signal return (reference/ground)

C373

14B719

B223
Driver memory seat front height sensor

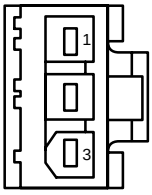

F03111

Pin	Circuit	Circuit Function
1	7-AH24 (YE/BK)	Voltage D.C. supplied at all times (sensor)
2	8-AH24 (WH/BK)	Sensor signal
3	9-AH24 (BN/YE)	Sensor signal return (reference/ground)