**W/O SUPERCREW**

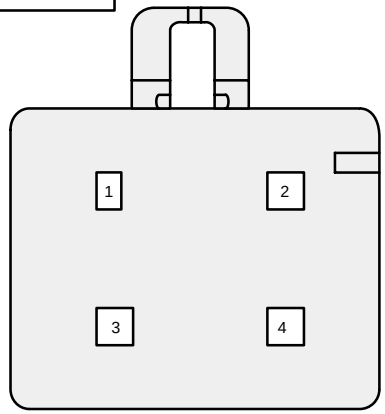


**C509**

**LEFT FRONT POWER WINDOW SWITCH**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 991 (TN/LB) | Left Switch to Motor Feed/Return (DOWN) |
| 2 | 992 (WH/BK) | Left Switch to Motor Feed/Return (UP) |
| 3 | 995 (GY) | Current Sense (HIGH) to GEM |
| 4 | 400 (LB/BK) | Switch Power |

**W/O SUPERCREW**

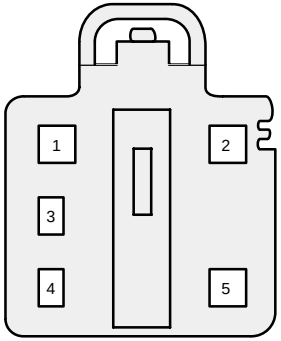


**C510**

**LEFT FRONT POWER WINDOW SWITCH**

| PIN | CIRCUIT | CIRCUIT FUNCTION |
|---|---|---|
| 1 | 313 (WH/YE) | Left Switch to Right Switch (UP) |
| 2 | 314 (TN/LB) | Left Switch to Right Switch (DOWN) |
| 3 | 57 (BK) | Ground |
| 4 | 19 (LB/RD) | Switch Illumination |
| 5 | 57 (BK) | Ground |