C2017 (WH)

14N104

E219
Sliding door entry
lamp, driver side



F02129

Pin	Circuit	Circuit Function
1	LP04 (BN)	Voltage supplied at all times (overload protected)
2	LP94 (BN/WH)	Illuminated entry, Ground

C2018 (WH)

14N104

D20
Data Link Connector
(DLC)

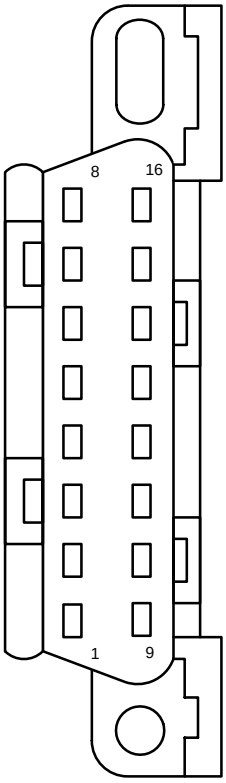

F16063

Pin	Circuit	Circuit Function
1	AV23 (BU/WH)	Powertrain Control Module (PCM)
2	AW01 (LG/BK)	EVAP canister vent control solenoid, input
3	–	not used
4	AVE3 (BK)	Ground
5	AV41 (BK/RD)	Ground
6	–	not used
7	AV42 (YE/GN)	ISO Bus
8	AV80 (BU)	Voltage supplied in Start and Run (overload protected)
9	BS30 (RD)	ABS control module
10	–	not used
11	–	not used
12	AV15 (YE/BK)	Powertrain Control Module (PCM)
13	AV07 (YE/RD)	Powertrain Control Module (PCM)
14	AW02 (BU/YE)	Voltage supplied in Start and Run (overload protected)
15	–	not used
16	AV50 (RD)	Voltage supplied at all times (overload protected)