C3169

19K315

Seat cushion heater, right rear

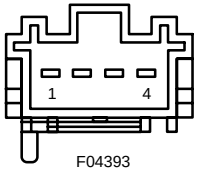

F04393

Pin	Circuit	Circuit function
1	20S-HC17 (PK)	heater, feed
2	8-HC23 (WH/BK)	Temperature, signal
3	9-HC23 (BN/YE)	Temperature, return
4	20S-HC16 (PK/BU)	heater, return

C3170

19K315

Seat back heater, right rear

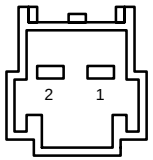

F02077

Pin	Circuit	Circuit function
1	20S-HC16 (PK/BU)	heater, feed
2	31S-HC16 (BK/BU)	heater, return

C3207

14B719

Seat track position sensor, driver



F02196

Pin	Circuit	Circuit function
1	9-JA53 (BN/RD)	Seat track position sensor, driver, Signal return
2	7-JA53 (YE/RD)	Seat track position sensor, driver, signal

C3208

14B079

Traction control switch

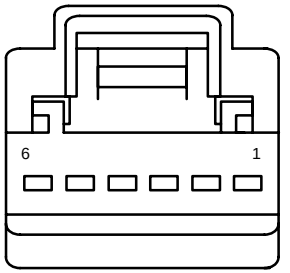

F06128

Pin	Circuit	Circuit function
1	31S-CF45 (BK/GN)	Traction control switch, indicator, control
2	–	not used
3	20-CF54 (PK/WH)	Voltage in Run (overload protected)
4	8-CF54 (WH/VT)	Traction control switch, switch sense
5	31-LH45 (BK/WH)	Illumination, Ground
6	64-LH45 (BU/OG)	Illumination, feed