C816

14014

B17
Wheel speed sensor, left rear



F02005

Pin	Circuit	Circuit Function
1	8-CF34 (WH/BU)	Sensor signal
	9-CF34 (BN/BU)	Sensor signal return (reference/ground)
2	7-CF34 (YE/BU)	Voltage D.C. supplied at all times (sensor)
	8-CF34 (WH/BU)	Sensor signal

C817

14014

B16
Wheel speed sensor, right rear

F02005

Pin	Circuit	Circuit Function
1	8-CF40 (WH/GN)	Sensor signal
	9-CF40 (BN/GN)	Sensor signal return (reference/ground)
2	7-CF40 (YE/GN)	Voltage D.C. supplied at all times (sensor)
	8-CF40 (WH/GN)	Sensor signal

C820 (GY)

14405

E57
Luggage compartment lamp

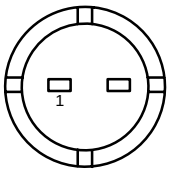

F02019

Pin	Circuit	Circuit Function
1	31S-LB25 (BK/BU)	Ground, switched
2	29-LB25 (OG/BU)	Voltage supplied at all times (overload protected)

C821

14K733

F03108

B140
Primary brake pressure sensor

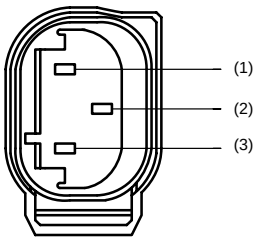

Pin	Circuit	Circuit Function
1	9-CF64 (BN/YE)	Sensor signal return (reference/ground)
	7-CF64 (YE/BK)	Voltage D.C. supplied at all times (sensor)
2	8-CF64 (WH/BK)	Sensor signal
3	7-CF64 (YE/BK)	Voltage D.C. supplied at all times (sensor)
	9-CF64 (BN/YE)	Sensor signal return (reference/ground)