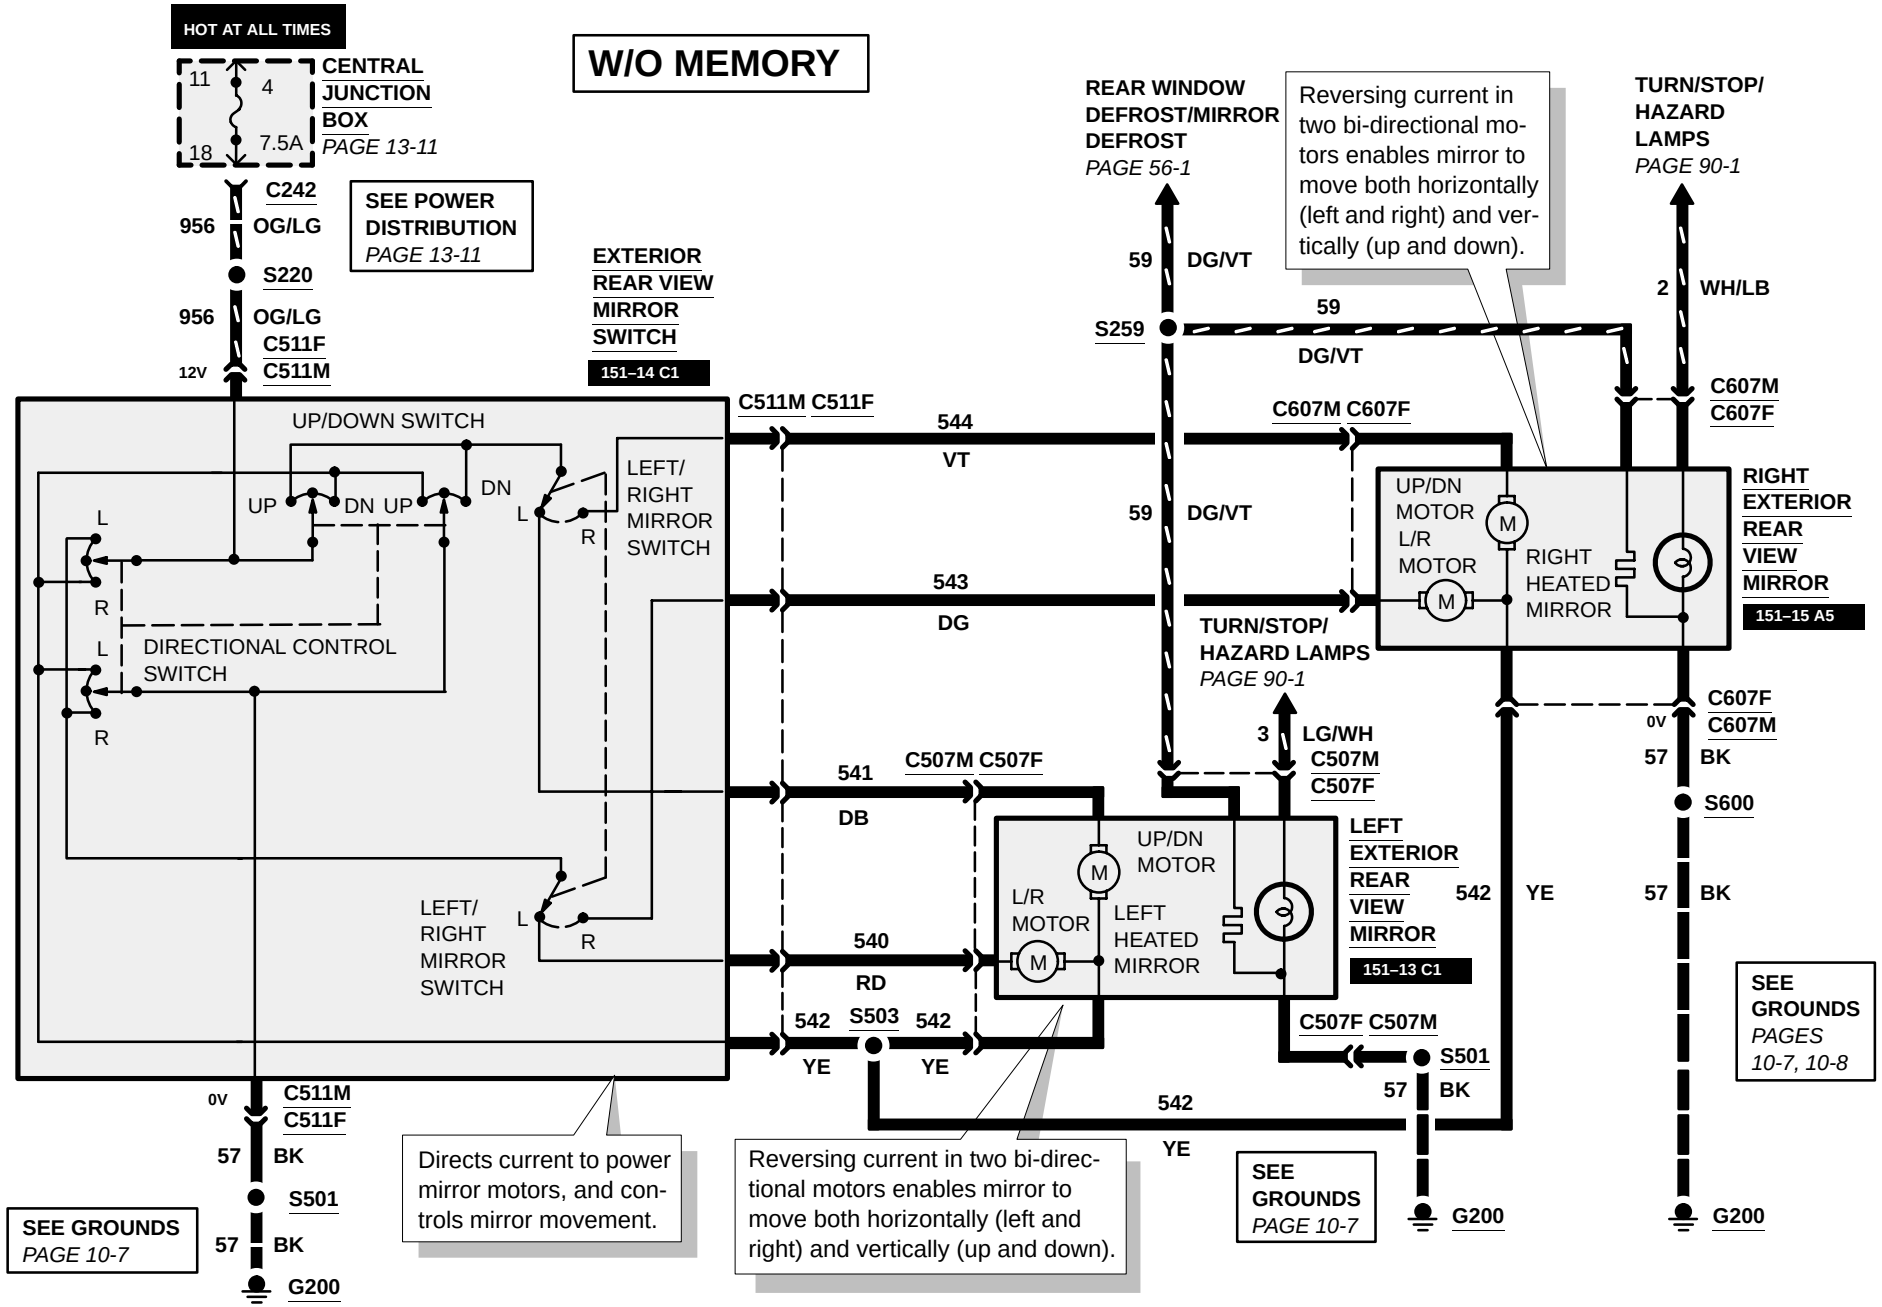
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-11
11
4
18
7.5A
C242
956 OG/LG
S220
956 OG/LG
C511F
C511M
12V
SEE POWER DISTRIBUTION
PAGE 13-11
W/O MEMORY
EXTERIOR REAR VIEW MIRROR SWITCH
151–14 C1
UP/DOWN SWITCH
UP
DN
DN
UP
L
R
LEFT/ RIGHT MIRROR SWITCH
DIRECTIONAL CONTROL SWITCH
LEFT/ RIGHT MIRROR SWITCH
C511M C511F
544 VT
543 DG
541 DB
540 RD
542 YE
542 S503 542
YE YE
REAR WINDOW DEFROST/MIRROR DEFROST
PAGE 56-1
59 DG/VT
S259
59 DG/VT
59 DG/VT
Reversing current in two bi-directional motors enables mirror to move both horizontally (left and right) and vertically (up and down).
TURN/STOP/ HAZARD LAMPS
PAGE 90-1
2 WH/LB
C607M C607F
C607M C607F
UP/DN MOTOR
L/R MOTOR
M
RIGHT HEATED MIRROR
RIGHT EXTERIOR REAR VIEW MIRROR
151–15 A5
TURN/STOP/ HAZARD LAMPS
PAGE 90-1
3 LG/WH
C507M C507F
C507M C507F
UP/DN MOTOR
L/R MOTOR
LEFT HEATED MIRROR
LEFT EXTERIOR REAR VIEW MIRROR
151–13 C1
542 YE
C507F C507M
S501
57 BK
542 YE
G200
SEE GROUNDS PAGES 10-7, 10-8
C607F C607M
0V
57 BK
S600
57 BK
G200
0V
C511M C511F
57 BK
S501
57 BK
G200
SEE GROUNDS PAGE 10-7
Directs current to power mirror motors, and controls mirror movement.
Reversing current in two bi-directional motors enables mirror to move both horizontally (left and right) and vertically (up and down).
SEE GROUNDS PAGE 10-7