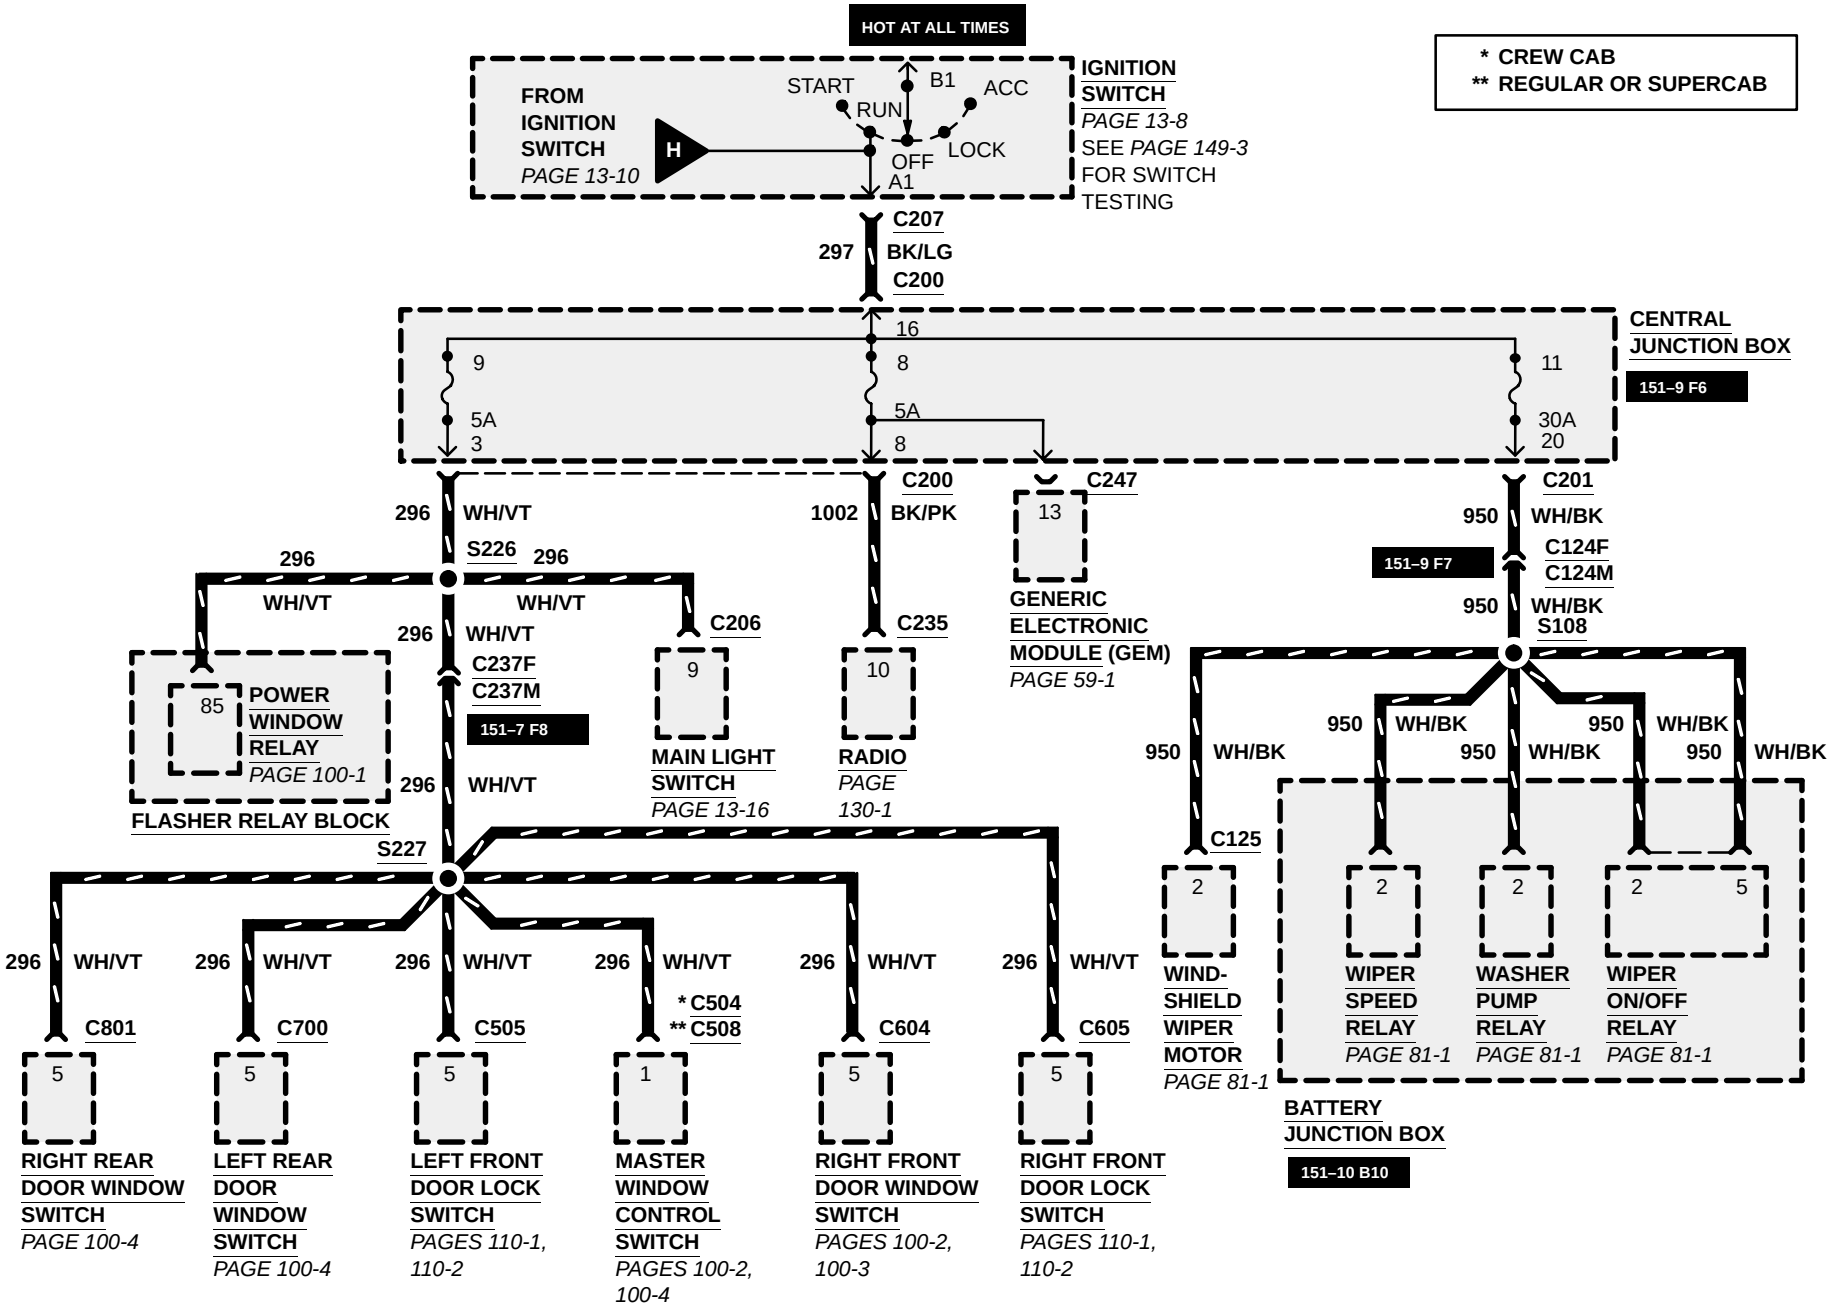
HOT AT ALL TIMES
* CREW CAB
** REGULAR OR SUPERCAB
FROM IGNITION SWITCH
PAGE 13-10
H
START
RUN
B1
ACC
OFF
LOCK
A1
IGNITION SWITCH
PAGE 13-8
SEE PAGE 149-3 FOR SWITCH TESTING
C207
297 BK/LG
C200
CENTRAL JUNCTION BOX
151–9 F6
16
9
8
11
5A
3
5A
8
30A
20
C200
1002 BK/PK
C247
13
C201
950 WH/BK
151–9 F7
C124F
C124M
950 WH/BK
S108
296 WH/VT
S226
296
296 WH/VT
296 WH/VT
C206
9
C235
10
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-1
296 WH/VT
C237F
C237M
151–7 F8
85
POWER WINDOW RELAY
PAGE 100-1
MAIN LIGHT SWITCH
PAGE 13-16
RADIO
PAGE 130-1
296 WH/VT
FLASHER RELAY BLOCK
S227
950 WH/BK
950 WH/BK
950 WH/BK
950 WH/BK
950 WH/BK
C125
2
2
2
2
5
WIND-SHIELD WIPER MOTOR
PAGE 81-1
WIPER SPEED RELAY
PAGE 81-1
WASHER PUMP RELAY
PAGE 81-1
WIPER ON/OFF RELAY
PAGE 81-1
BATTERY JUNCTION BOX
151–10 B10
296 WH/VT
296 WH/VT
296 WH/VT
296 WH/VT
296 WH/VT
296 WH/VT
C801
C700
C505
* C504
** C508
C604
C605
5
5
5
1
5
5
RIGHT REAR DOOR WINDOW SWITCH
PAGE 100-4
LEFT REAR DOOR WINDOW SWITCH
PAGE 100-4
LEFT FRONT DOOR LOCK SWITCH
PAGES 110-1, 110-2
MASTER WINDOW CONTROL SWITCH
PAGES 100-2, 100-4
RIGHT FRONT DOOR WINDOW SWITCH
PAGES 100-2, 100-3
RIGHT FRONT DOOR LOCK SWITCH
PAGES 110-1, 110-2