57-3 DRIVER DOOR MODULE

SIGNATURE/CARTIER

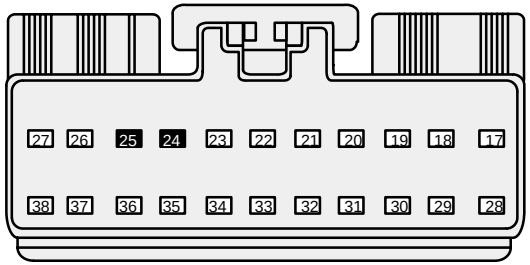

C520

DRIVER DOOR MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
17	118 (PK/OG)	Unlock All Passenger Doors
18	945 (YE/BK)	Power Mirror Switch; Common
19	940 (DB/OG)	Power Mirror Switch; Left Vertical
20	270 (BN/OG)	Memory Set
21	267 (BN/LG)	Memory 1
22	119 (PK/YE)	Lock Door Switch
23	676 (PK/OG)	Ground
24	–	NOT USED
25	–	NOT USED
26	171 (BK/WH)	Power (Hot at All Times)
27	57 (BK)	Ground
28	605 (RD)	Decklid Release
29	797 (LG/VT)	Power (Hot at All Times)
30	942 (RD/OG)	Power Mirror Switch; Left Horizontal
31	943 (VT/OG)	Power Mirror Switch; Right Vertical
32	944 (DG/OG)	Power Mirror Switch; Right Horizontal
33	268 (BK/OG)	Memory 2
34	120 (PK/LG)	Unlock Door Switch
35	914 (TN/OG)	Multiplex Communication Network (+)
36	915 (PK/LB)	Multiplex Communication Network (–)
37	163 (RD/OG)	Driver Door Unlock
38	117 (PK/BK)	Lock All Doors

SIGNATURE/CARTIER

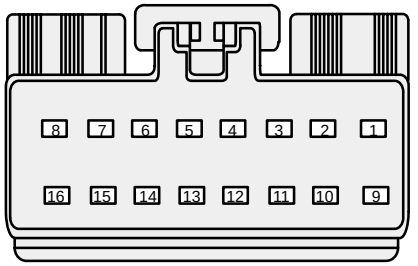

C521

DRIVER DOOR MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	978 (YE/LB)	Front Seat Down
2	979 (RD/LB)	Front Seat Up
3	983 (RD/LG)	Rear of Seat Up
4	982 (YE/LG)	Rear of Seat Down
5	867 (DB)	Driver Door Ajar
6	627 (BK/OG)	Passenger Door Ajar
7	26 (WH/VT)	Luggage Compartment Lid Release Switch
8	78 (LB/YE)	Keypad Switch A
9	980 (YE/WH)	Seat Backward
10	981 (RD/WH)	Seat Forward
11	919 (GY/BK)	Back Recline
12	918 (GY)	Forward Recline
13	79 (LG/RD)	Keypad Switch C
14	272 (WH/OG)	Memory L. E. D.
15	995 (GY)	One Touch Down
16	121 (YE/BK)	Keypad Switch B