PREMIUM

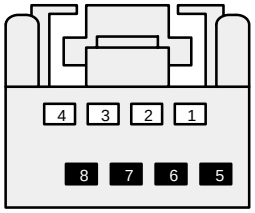

C230

FRONT CONTROL UNIT

PIN	CIRCUIT	CIRCUIT FUNCTION
1	167 (BN/OG)	Radio-Subwoofer High Audio (–)
2	168 (RD/BK)	Radio-Subwoofer High Audio (+)
3	48	Audio Shield
4	173 (DG/VT)	Radio-Subwoofer High Audio Mute
5	–	NOT USED
6	–	NOT USED
7	–	NOT USED
8	–	NOT USED

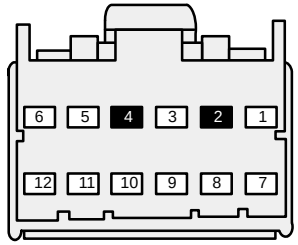

C499

CD CHANGER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	832 (LB/PK)	Audio Communication Network
2	–	NOT USED
3	694 (BK/LG)	Ground
4	–	NOT USED
5	856 (VT)	CD-Left Channel Signal In
6	690 (GY)	CD-Right Channel Signal In
7	833 (TN)	Audio Communication Network
8	1068 (LG/BK)	Audio System On
9	828 (VT/LB)	Power (Hot at All Times)
10	48	Audio Shield
11	798 (LG/RD)	CD-Left Channel Signal Out
12	799 (OG/BK)	CD-Right Channel Signal Out