C312 (GY)

2C011

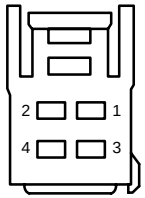

F04106

(1) 1574 (DB)
(2) 1575 (BK/WH)
(3) 3125 (RD/YE)
(4) 3126 (TN/YE)

14A488

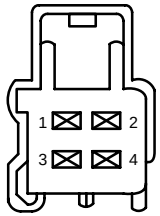

F04105

(1) 1574 (DB)
(2) 1575 (BK/WH)
(3) 1879 (PK/BK)
(4) 1878 (WH/BK)

C320 (GN)

* Late build

14C719

Seat heater switch, driver side

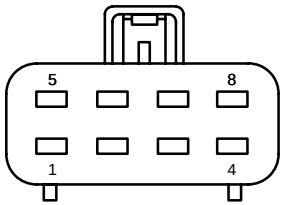

F08209

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
1	*298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
2	581 (RD)	Seat heater switch, driver side to Heated seat module, driver side front
2	*1064 (YE/LB)	Seat heater switch, driver side, output
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used

C321 (GN)

* Late build

14C719

Seat heater switch, passenger side

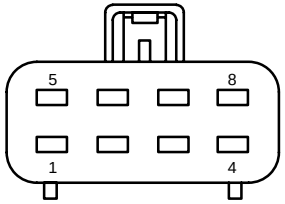

F08209

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
1	*298 (VT/OG)	Voltage supplied in Start and Run (overload protected)
2	581 (RD)	Seat heater switch, driver side to Heated seat module, passenger side front
2	*1064 (YE/LB)	Seat heater switch, passenger side, output
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used