C3015

without memory

14B084

Power seat motor assembly, right

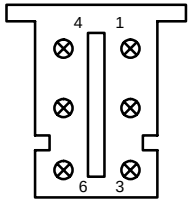

F06138

Pin	Circuit	Circuit function
1	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
2	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
3	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
4	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
5	988 (YE/LG)	Seat adjust switch, to, front, Tilt, Seat motor
6	989 (RD/LG)	Seat adjust switch, to, front, Tilt, Seat motor

C3044

14A504

Mode door actuator, rear (19E616)

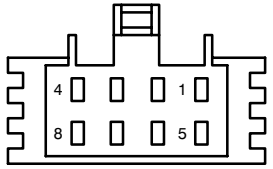

F08059

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	1131 (LG)	Rear A/C control module, signal
4	1128 (GY/LB)	signal, +
5	–	not used
6	1129 (BN/WH)	Signal return
7	295 (LB/PK)	electronic cluster, Accessory, feed
8	57 (BK)	Ground