C3129 (NA)

14A200

Door ajar switch, left front

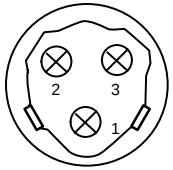

F03335

Pin	Circuit	Circuit function
1	159 (RD/PK)	Door ajar switch, left front, signal
2	54 (LG/YE)	Voltage supplied at all times (overload protected)
3	53 (BK/LB)	Interior lamps, control

C3130 (BK)

14A200

Speaker, left middle

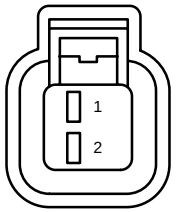

F02069

* with rear seat entertainment system

Pin	Circuit	Circuit function
1	*827 (TN/WH)	Speaker, left rear (18808) +
	800 (GY/LB)	
2	801 (TN/YE)	Speaker, left rear (18808) –

C3131

14A200

Memory lock module

Lock jumper

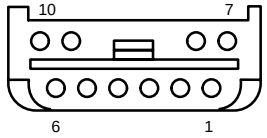

F10085

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output
3	–	not used
4	57 (BK)	Ground
5	–	not used
6	–	not used
7	121 (YE/BK)	Side door, Lock, output
8	517 (BK/WH)	Voltage supplied at all times (overload protected)
9	–	not used
10	–	not used

C3132 (BK)

14406

Midship fuel tank valve

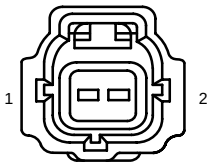

F02111

Pin	Circuit	Circuit function
1	787 (PK/BK)	Fuel pump, Power
2	57 (BK)	Ground