G53

-16

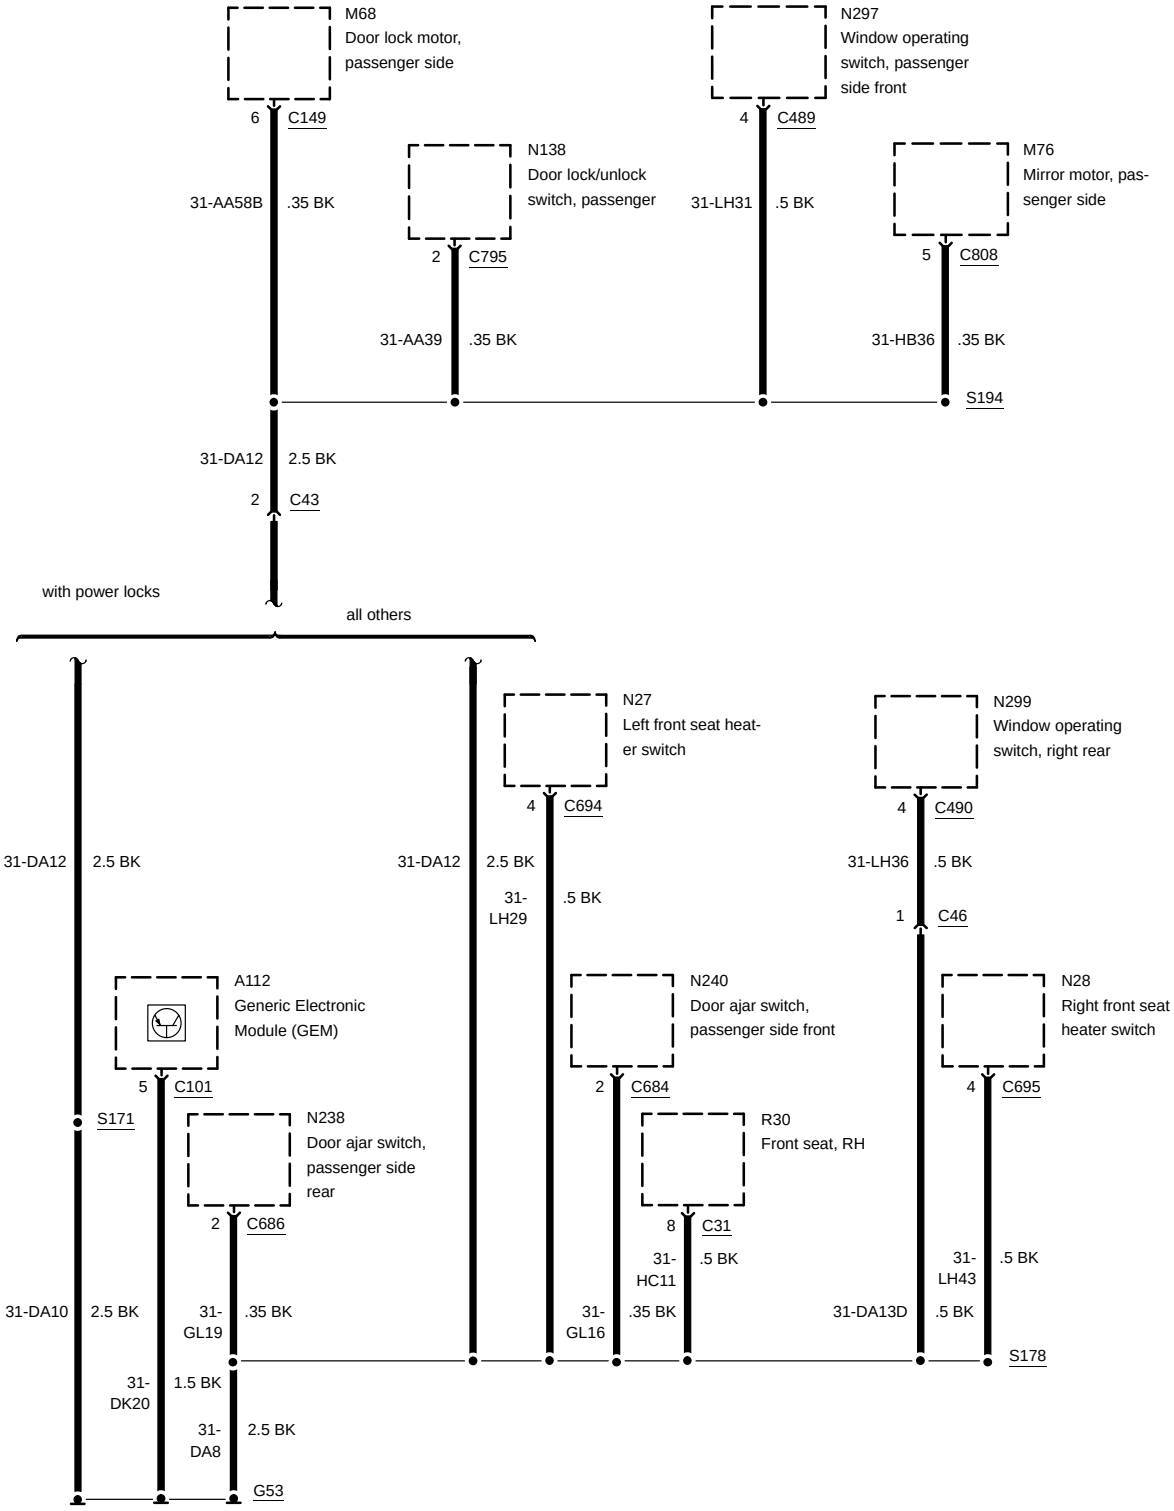
M68
Door lock motor, passenger side
6
C149
31-AA58B
.35 BK
N138
Door lock/unlock switch, passenger
2
C795
31-AA39
.35 BK
N297
Window operating switch, passenger side front
4
C489
31-LH31
.5 BK
M76
Mirror motor, passenger side
5
C808
31-HB36
.35 BK
S194
31-DA12
2.5 BK
2
C43
with power locks
all others
31-DA12
2.5 BK
S171
5
C101
A112
Generic Electronic Module (GEM)
N238
Door ajar switch, passenger side rear
2
C686
31-DA10
2.5 BK
31-GL19
.35 BK
31-DK20
1.5 BK
31-DA8
2.5 BK
G53
31-DA12
2.5 BK
4
C694
N27
Left front seat heater switch
31-LH29
.5 BK
N240
Door ajar switch, passenger side front
2
C684
31-GL16
.35 BK
R30
Front seat, RH
8
C31
31-HC11
.5 BK
N299
Window operating switch, right rear
4
C490
31-LH36
.5 BK
1
C46
N28
Right front seat heater switch
4
C695
31-LH43
.5 BK
31-DA13D
.5 BK
S178