C242

14401

N114
Fog lamp switch

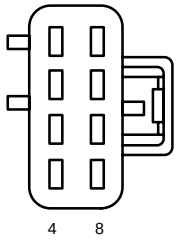

F08177

Pin	Circuit	Circuit Function
1	1347 (DB/WH)	Fog lamp switch, output
2	13 (RD/BK)	High beam lamp, Switched, Ground
3	-	not used
4	57 (BK)	Ground
5	-	not used
6	478 (TN/OG)	Fog lamp switch, Illumination, input
7	-	not used
8	19 (LB/RD)	Voltage supplied at all times (overload protected)

C250

14401

N278
Ignition switch

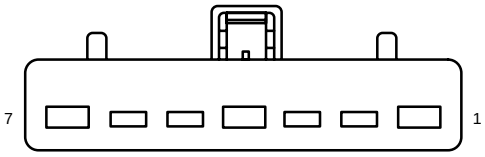

F07073

Pin	Circuit	Circuit Function
1	1050 (LG/VT)	Voltage supplied at all times (overload protected)
2	-	not used
3	1420 (YE/LB)	Key removal inhibit solenoid, Switched, Ground
4	32 (RD/LB)	Voltage supplied at all times (overload protected)
5	158 (BK/PK)	Key warning switch, input
6	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
7	306 (TN/LB)	Voltage supplied in Start (overload protected)

C248

14405

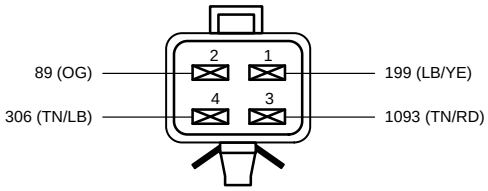

F04239

7M196

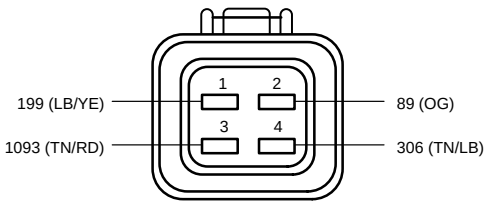

F04241