C2176

14401

A416
Auxiliary Powertrain Control Module (APCM)

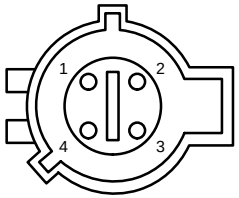

F04082

Pin	Circuit	Circuit function
1	915 (PK/LB)	SCP Bus –
2	914 (TN/OG)	SCP Bus +
3	57 (BK)	Ground
4	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C2177

14401

N617
Speed control Set/ Resume switch

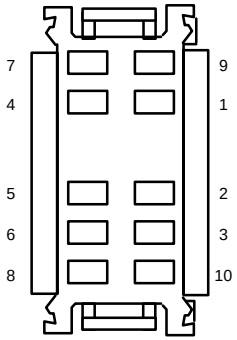

F10135

Pin	Circuit	Circuit function
1	848 (DG/OG)	Speed control switch, Ground
2	21 (DK/LG)	Powertrain Control Module (PCM) (12A650) – Flexible fuel sensor
3	154 (VT/LG)	Speed control switch, feed
4	–	not used
5	–	not used
6	–	not used
7	19 (LG/RD)	Illumination, Power
8	19 (LG/RD)	Illumination, Power
9	57 (BK)	Ground
10	57 (BK)	Ground

C2178

14401

N618
Speed control On/ Off switch

* Cummins

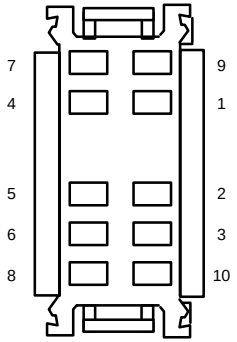

F10135

Pin	Circuit	Circuit function
1	–	not used
2	151 (LB/BK)	Speed control switch, input
3	21 (DK/LG)	Powertrain Control Module (PCM) (12A650) – Flexible fuel sensor
	*1203 (BK/LB)	Ground
4	–	not used
5	–	not used
6	–	not used
7	19 (LG/RD)	Illumination, Power
8	19 (LG/RD)	Illumination, Power
9	57 (BK)	Ground
10	57 (BK)	Ground

C2179a

14401

A417
Trax module

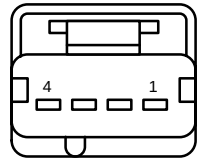

F04143

Pin	Circuit	Circuit function
1	1356 (LG/VT)	TX, signal
2	–	not used
3	1357 (LB /YE)	signal, return
4	–	not used