C2041b (BK)

14A005

Restraints control module (14B321)

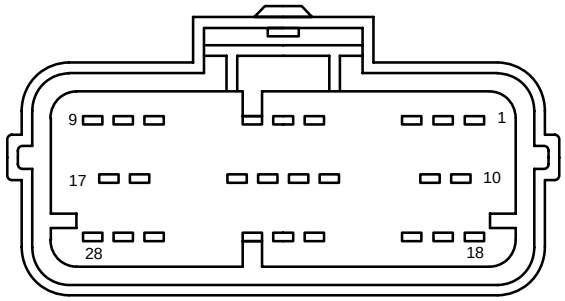

F26008

Pin	Circuit	Circuit function
1	1556 (DG/VT)	Seat weight sensor, passenger, feed
2	1557 (DB/OG)	Seat weight sensor, passenger, return
3	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
4	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
5	1311 (OG)	Seat belt buckle switch, input
6	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
7	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
8	1520 (LG)	Seat position sensor, driver side, feed
9	1558 (TN/BK)	Seat position sensor, driver side, return
10	1085 (LB/RD)	Safety belt buckle switch, passenger, passenger side, input
11	1516 (YE/WH)	Driver air bag, stage II, feed
12	1517 (RD/OG)	Driver air bag, stage II, return
13	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed
14	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
15	1257 (WH/LB)	Air bag – driver side impact – to module – feed
16	1258 (RD)	Air bag – driver side impact – to module – return
17	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed
18	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return
19	–	not used
20	1518 (RD/WH)	Passenger air bag, stage II, feed
21	1519 (LG/RD)	Passenger air bag, stage II, return
22	629 (BN)	Passenger Air bag Deactivation (PAD) switch, not used
23	1259 (WH/YE)	Air bag – passenger side impact – to module – feed
24	1260 (BN/YE)	Air bag – passenger side impact – to module – return
25	617 (PK/OG)	Air bag crash sensor #1, feed
26	618 (VT/LG)	Air bag crash sensor #1, return

C2056

14401

Courtesy lamp, left footwell

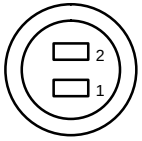

F02086

Pin	Circuit	Circuit function
1	1459 (YE/WH)	Voltage supplied at all times (overload protected)
2	1420 (YE/LB)	Switched ground

C2057

14401

Courtesy lamp, right footwell

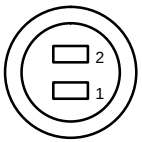

F02086

Pin	Circuit	Circuit function
1	1459 (YE/WH)	Voltage supplied at all times (overload protected)
2	1420 (YE/LB)	Switched ground