G105

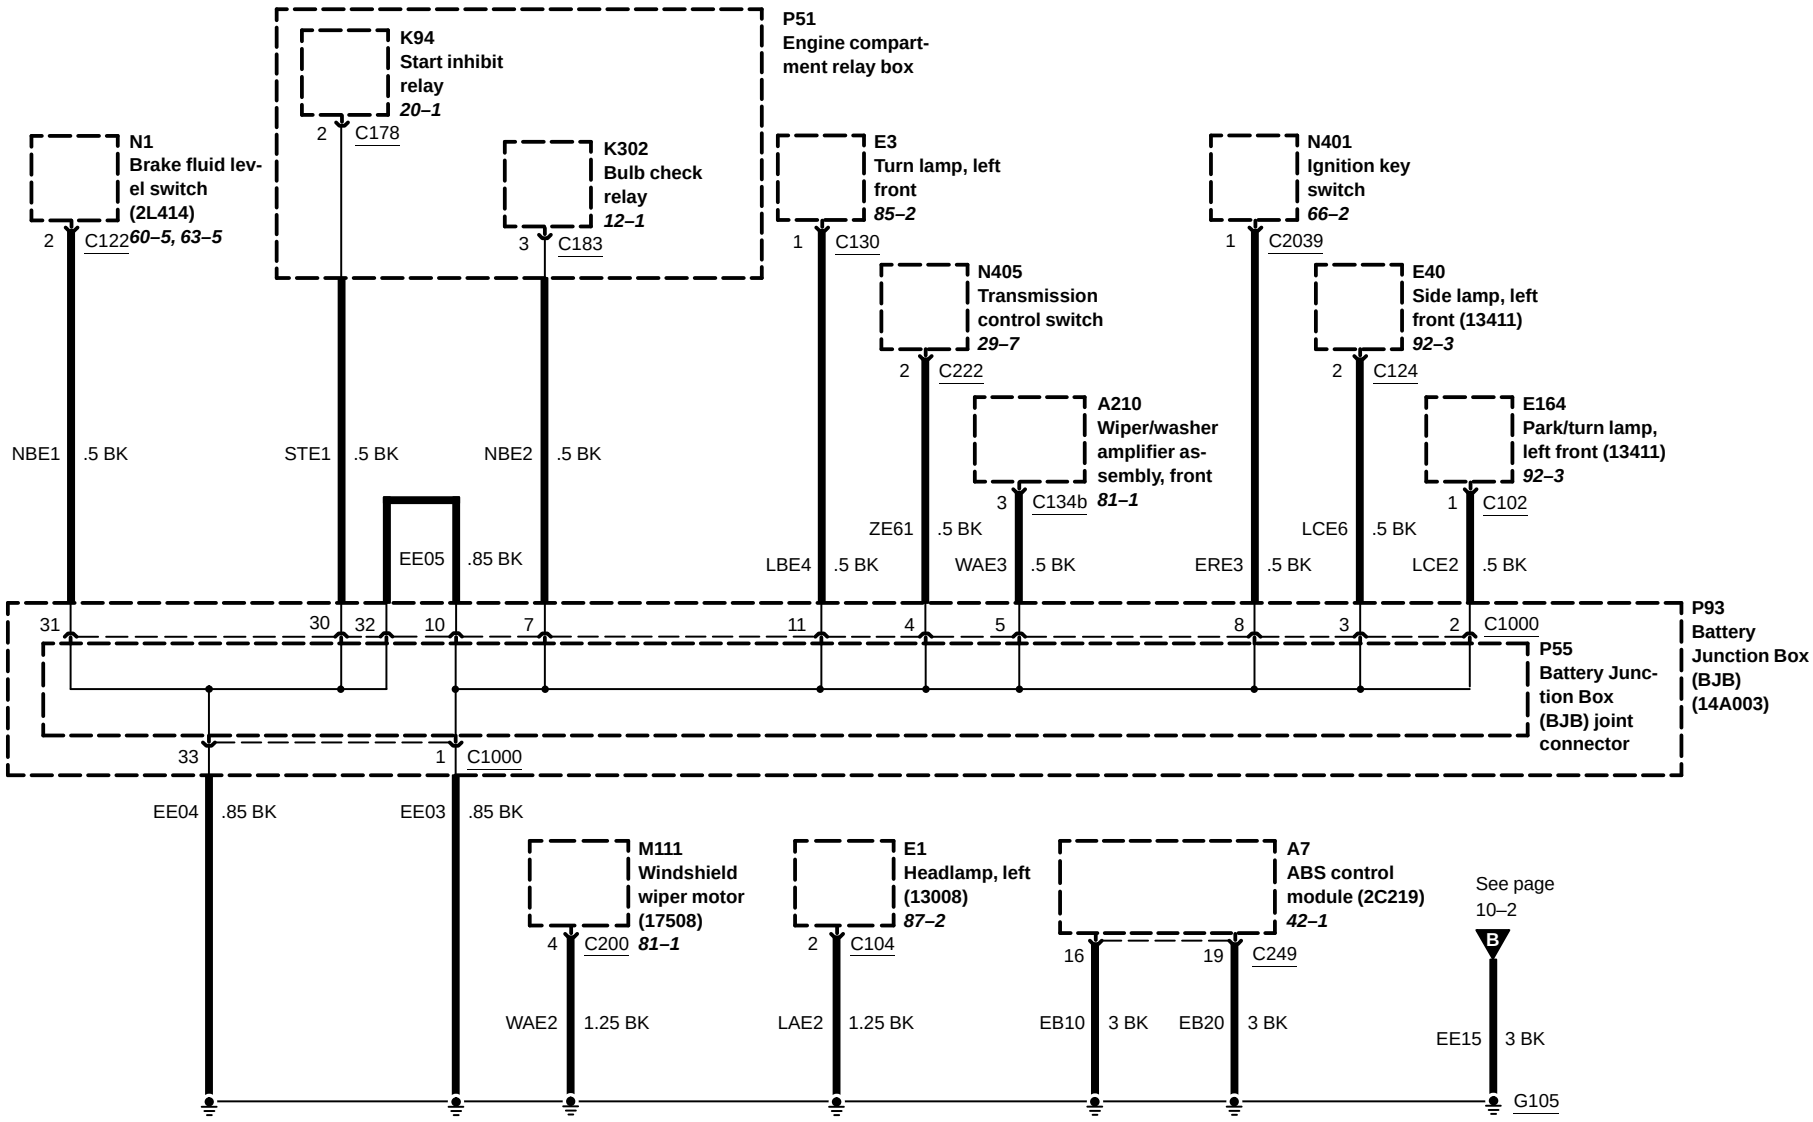
P51
Engine compartment relay box
K94
Start inhibit relay
20–1
2 C178
K302
Bulb check relay
12–1
3 C183
N1
Brake fluid level switch (2L414)
2 C122 60–5, 63–5
E3
Turn lamp, left front
85–2
1 C130
N401
Ignition key switch
66–2
1 C2039
N405
Transmission control switch
29–7
2 C222
E40
Side lamp, left front (13411)
92–3
2 C124
A210
Wiper/washer amplifier assembly, front
81–1
3 C134b
E164
Park/turn lamp, left front (13411)
92–3
1 C102
NBE1 .5 BK
STE1 .5 BK
NBE2 .5 BK
EE05 .85 BK
ZE61 .5 BK
LBE4 .5 BK
WAE3 .5 BK
ERE3 .5 BK
LCE6 .5 BK
LCE2 .5 BK
31 30 32 10 7 11 4 5 8 3 2 C1000
P93
Battery Junction Box (BJB) (14A003)
P55
Battery Junction Box (BJB) joint connector
33 1 C1000
EE04 .85 BK
EE03 .85 BK
M111
Windshield wiper motor (17508)
81–1
4 C200
WAE2 1.25 BK
E1
Headlamp, left (13008)
87–2
2 C104
LAE2 1.25 BK
A7
ABS control module (2C219)
42–1
16 19 C249
EB10 3 BK
EB20 3 BK
See page 10–2
B
EE15 3 BK
G105