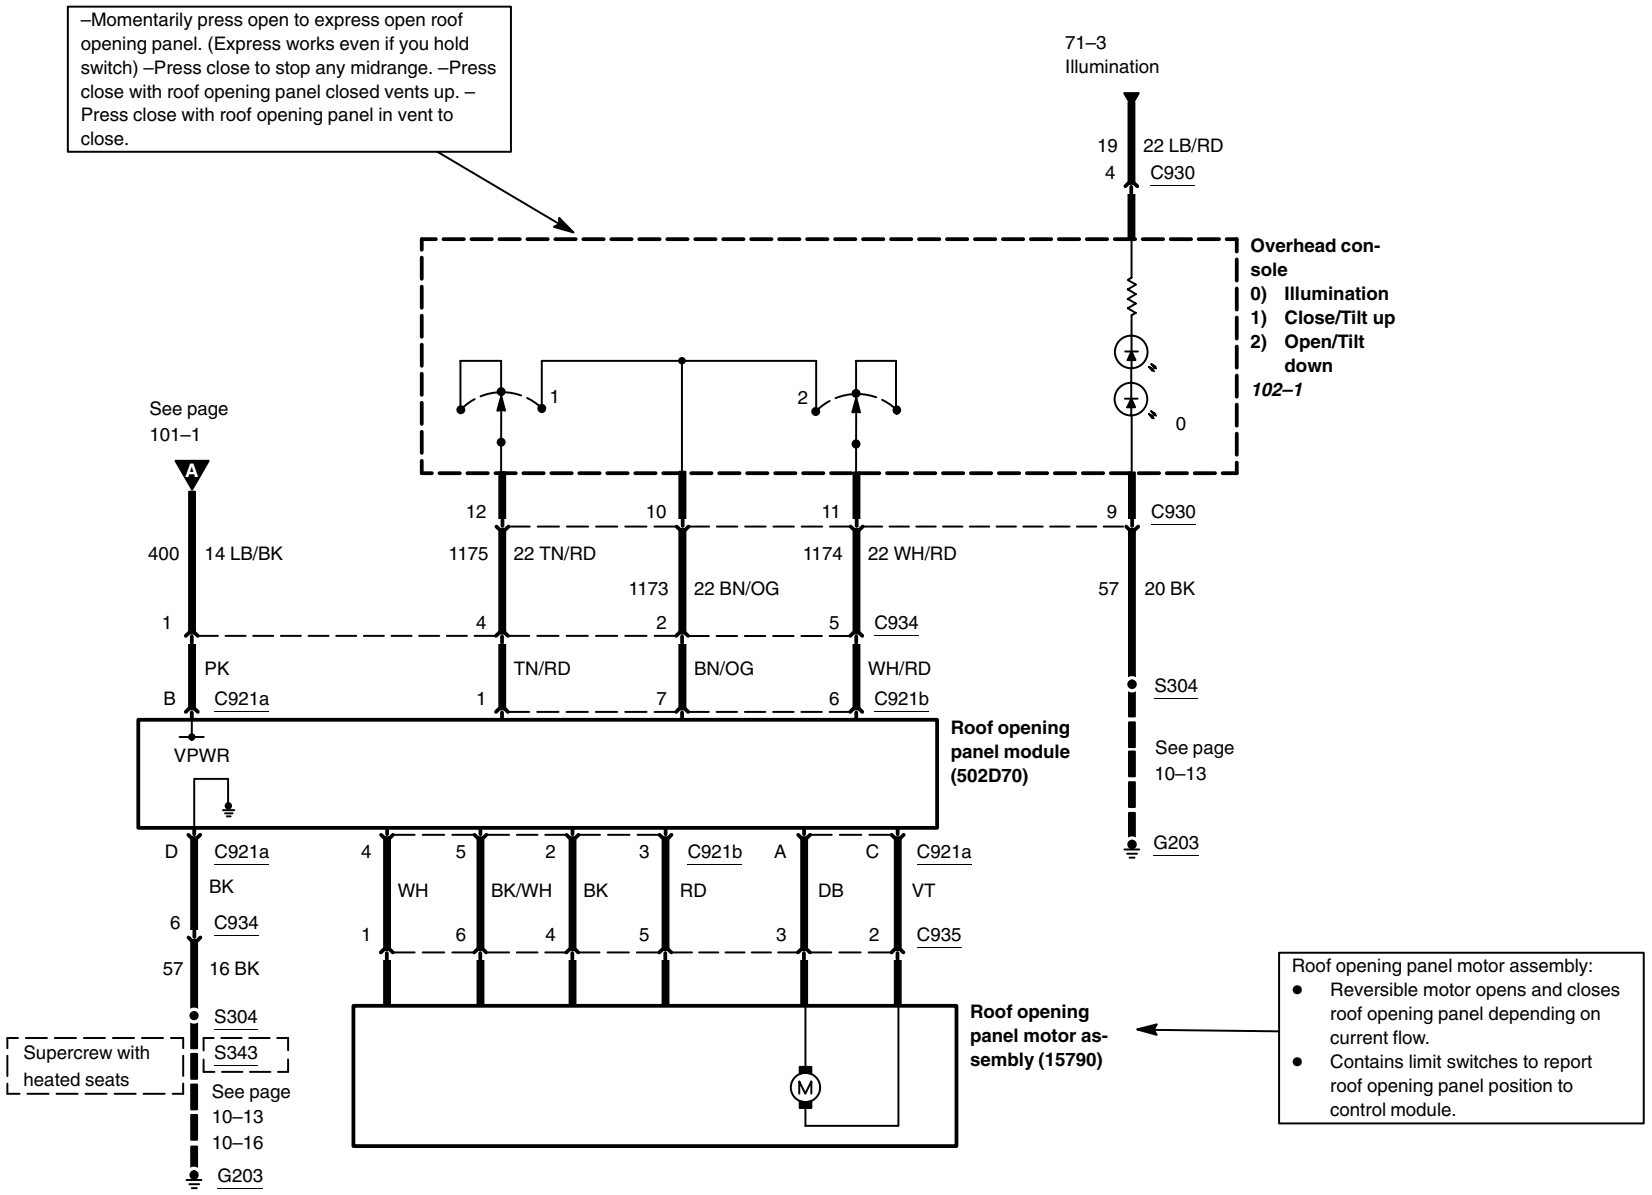
–Momentarily press open to express open roof opening panel. (Express works even if you hold switch) –Press close to stop any midrange. –Press close with roof opening panel closed vents up. –Press close with roof opening panel in vent to close.
71–3
Illumination
19
4
22 LB/RD
C930
Overhead console
0) Illumination
1) Close/Tilt up
2) Open/Tilt down
102–1
1
2
0
See page
101–1
A
12
10
11
9
C930
400
14 LB/BK
1175
22 TN/RD
1173
22 BN/OG
1174
22 WH/RD
57
20 BK
1
4
2
5
C934
PK
TN/RD
BN/OG
WH/RD
B
C921a
1
7
6
C921b
S304
VPWR
Roof opening panel module (502D70)
See page
10–13
G203
D
C921a
4
5
2
3
C921b
A
C
C921a
BK
WH
BK/WH
BK
RD
DB
VT
6
C934
1
6
4
5
3
2
C935
57
16 BK
S304
Supercrew with heated seats
S343
See page
10–13
10–16
G203
M
Roof opening panel motor assembly (15790)
Roof opening panel motor assembly:
• Reversible motor opens and closes roof opening panel depending on current flow.
• Contains limit switches to report roof opening panel position to control module.