C703 (BK)

14633

Power window motor, left rear (23394)

F02623

Pin	Circuit	Circuit function
1	885 (YE/LB)	Window switch to, Window motor, left rear
2	884 (YE/BK)	Window switch to, Window motor, left rear

C704 (GY)

14633

Door lock actuator, left rear (218A43)

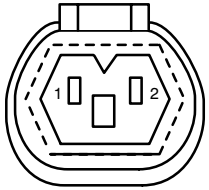

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C715a (GY)

14633

Door ajar switch, driver side rear (14018)

F01065

Pin	Circuit	Circuit function
1	759 (LG/YE)	Door ajar switch, left rear

C715b (BK)

14633

Door ajar switch, driver side rear (14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C801 (GY)

14632

Window adjust switch, right rear (14A412)

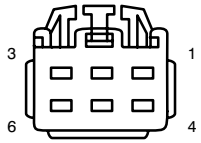

F06213

Pin	Circuit	Circuit function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	882 (BN/YE)	Window switch to, Window motor, right rear
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	881 (BN)	Window switch to, Window motor, right rear
6	319 (YE/BK)	Window switch, feed, right rear, Up