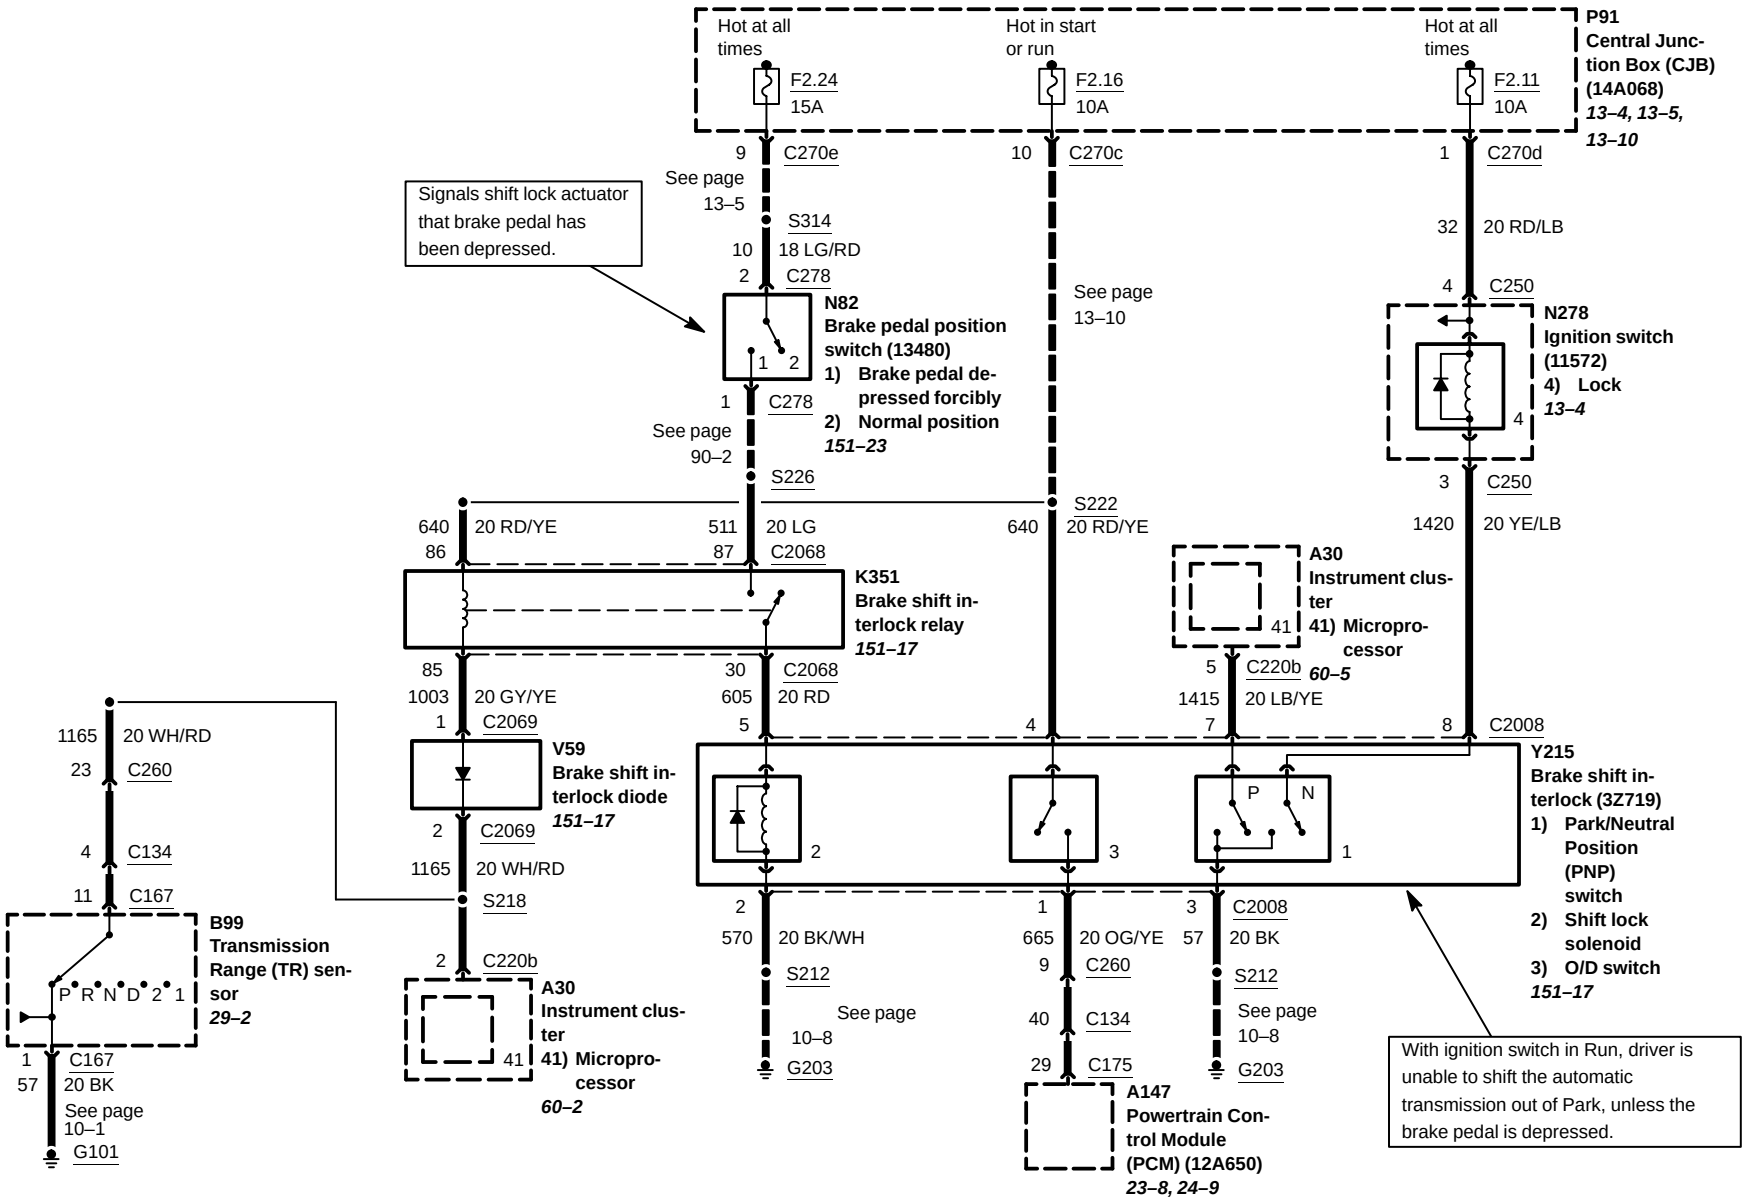
Hot at all times
F2.24
15A
Hot in start or run
F2.16
10A
Hot at all times
F2.11
10A
P91
Central Junction Box (CJB)
(14A068)
13–4, 13–5, 13–10
9 C270e
See page 13–5
10 C270c
1 C270d
Signals shift lock actuator that brake pedal has been depressed.
S314
10 18 LG/RD
2 C278
N82
Brake pedal position switch (13480)
1) Brake pedal depressed forcibly
2) Normal position
151–23
1 C278
See page 90–2
See page 13–10
32 20 RD/LB
4 C250
N278
Ignition switch (11572)
4) Lock
13–4
3 C250
S226
S222
640 20 RD/YE
511 20 LG
640 20 RD/YE
1420 20 YE/LB
86
87 C2068
K351
Brake shift interlock relay
151–17
A30
Instrument cluster
41) Microprocessor
60–5
85
30 C2068
5 C220b
1003 20 GY/YE
605 20 RD
1415 20 LB/YE
1 C2069
4
7
8 C2008
Y215
Brake shift interlock (3Z719)
1) Park/Neutral Position (PNP) switch
2) Shift lock solenoid
3) O/D switch
151–17
V59
Brake shift interlock diode
151–17
2 C2069
1165 20 WH/RD
S218
2 C220b
A30
Instrument cluster
41) Microprocessor
60–2
1165 20 WH/RD
23 C260
4 C134
11 C167
B99
Transmission Range (TR) sensor
29–2
P R N D 2 1
1 C167
57 20 BK
See page 10–1
G101
2 570 20 BK/WH
S212
See page 10–8
G203
1 665 20 OG/YE
9 C260
40 C134
29 C175
A147
Powertrain Control Module (PCM) (12A650)
23–8, 24–9
3 C2008
57 20 BK
S212
See page 10–8
G203
With ignition switch in Run, driver is unable to shift the automatic transmission out of Park, unless the brake pedal is depressed.