C270a

14401

P91
Central Junction
Box (CJB) (14A068)

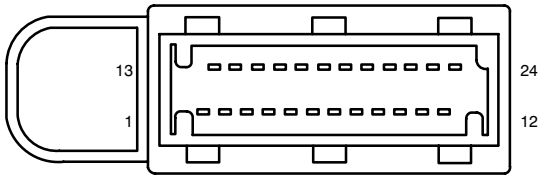

F32003

Pin	Circuit	Circuit function
1	54 (LG/YE)	Accessory delay, switched power, input
2	1000 (RD/BK)	Voltage supplied in Start (overload protected)
3	22 (LB/BK)	Voltage supplied at all times (overload protected)
4	33 (WH/PK)	switched power, to starter solenoid
5	296 (WH/VT)	Voltage in Run (overload protected)
6	–	not used
7	1306 (PK/WH)	Voltage supplied at all times (overload protected), to, Vehicle Security Module (VSM)
8	640 (RD/YE)	Power (Start or Run)
9	688 (GY/LB)	Voltage supplied in Start and Run (overload protected)
10	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
11	399 (BN/YE)	Blower motor relay, control
	296 (WH/VT)	Voltage, hot in run only
12	57 (BK)	Ground
	399 (BN/YE)	Blower motor relay, control
13	12 (LG/BK)	Switched, Ground
14	1332 (LB)	Accessory delay relay, control
15	705 (LG/OG)	Battery saver relay, switched power
16	294 (WH/LB)	Voltage supplied in Start and Run (overload protected)
17	276 (BN)	Blower motor relay, control
18	609 (OG/YE)	Voltage supplied at all times (overload protected)
19	1 (DB)	Horn relay, control
20	–	not used
21	295 (LB/PK)	electronic cluster, Accessory, feed
22	238 (DG/YE)	Fuel pump relay, switched power, output
23	194 (PK)	Window safety relay, switched output
24	829 (WH/VT)	Voltage supplied at all times (overload protected)