C192 (BK)

7C078

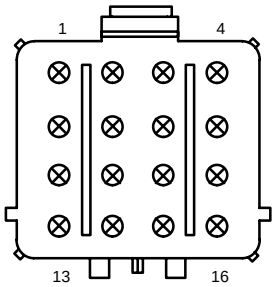

F16095

(1)	–	(9)	–
(2)	359 (GY/RD)	(10)	–
(3)	359 (GY/RD)	(11)	–
(4)	392 (RD/LG)	(12)	1144 (YE/BK)
(5)	1145 (LB/BK)	(13)	–
(6)	1146 (LG/RD)	(14)	–
(7)	–	(15)	–
(8)	359 (GY/RD)	(16)	–

9D930/12B637

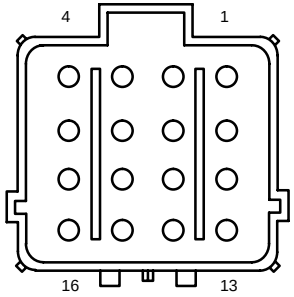

F16167

(1)	–	(9)	–
(2)	359 (GY/RD)	(10)	–
(3)	359 (GY/RD)	(11)	–
(4)	392 (RD/LG)	(12)	1144 (YE/BK)
(5)	1145 (LB/BK)	(13)	–
(6)	1146 (LG/RD)	(14)	–
(7)	–	(15)	–
(8)	359 (GY/RD)	(16)	–

C193

7C078

Output Shaft Speed (OSS) sensor (7H103)

4R100 (BK)

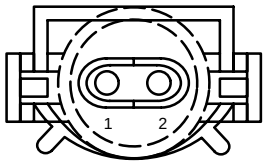

F02031

4R70W (BK)

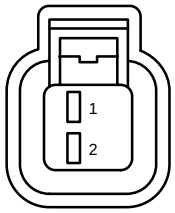

F02069

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	136 (DB/YE)	Powertrain Control Module (PCM) (12A650) – Output Shaft Speed (OSS) sensor (7H103)

C194 (GY)

12B637

Ignition transformer capacitor 2 (18801)

F01031

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C197a

14300

Starter motor (11002)

Diesel



F01227

except diesel

F01093

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +

C197b

14300

Starter motor (11002)

Diesel



F01025

except diesel



F01061

Pin	Circuit	Circuit function
1	2037 (RD)	Battery cable +