C205

14401

N113
Main light switch
(11654)

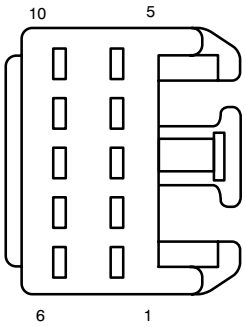

F10063

Pin	Circuit	Circuit Function
1	8-LE21 (WH/GN)	Sensor signal
2	–	not used
3	–	not used
4	31-LH26 (BK)	Ground
5	64S-LH26 (BU/BK)	Variable D.C. voltage (not overload protected), Switched
6	–	not used
7	9-LE29 (BN/GN)	Sensor signal return (reference/ground)
8	8-LE47 (WH/GN)	Signal 2 (Y–direction, reverse, downward)
9	–	not used
10	–	not used

C206

14401

A47
Instrument panel
dimming module

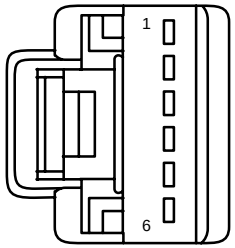

F06179

Pin	Circuit	Circuit Function
1	64S-LE10 (BU/YE)	Variable D.C. voltage (not overload protected), Switched
2	31-LE10 (BK)	Ground
3	8-LE10 (WH/BK)	Sensor signal
4	9-LE10 (BN/YE)	Sensor signal return (reference/ground)
5	–	not used
6	–	not used

C207

14A005

N434
Luggage compart-
ment lid release
switch



F02185

Pin	Circuit	Circuit Function
1	8-AA30 (WH)	Sensor signal
2	31-AA30 (BK/YE)	Ground