C205

14401

N113
Main light switch
(11654)

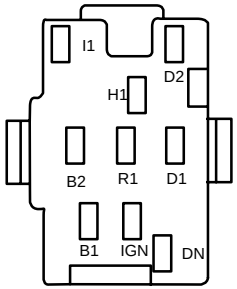

Pin	Circuit	Circuit function
B1	196 (DB/OG)	Voltage supplied at all times (overload protected)
B2	195 (TN/WH)	Voltage supplied at all times (overload protected)
D1	1006 (DG/WH)	Voltage supplied at all times (overload protected)
D2	706 (GY)	Power, input, Main light switch (11654), to, Generic Electronic Module (GEM) (14B205)
DN	–	not used
H1	15 (RD/YE)	Power, Hot with Headlamps on
I1	1045 (DB/WH)	Illumination dimmer, output
IGN	–	not used
R1	14 (BN)	Power, Exterior lamps

C210

12A581

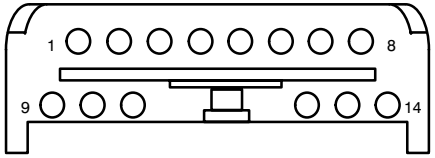

F14055

14A005

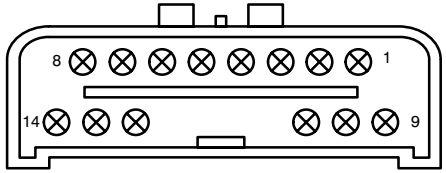

F14008

(1) 351 (BN/WH)
(2) 492 (BN)
(3) 494 (TN/LG)
(4) 224 (TN/WH)
(5) 391 (RD/YE)
(6) 928 (LB/OG)
(7) 19 (LB/RD)
(8) 922 (WH/RD)
(9) 14 (BN)
(10) 791 (RD/PK)
(11) 359 (GY/RD)
(12) 101(GY/YE)
(13) 140 (BK/PK)
(14) 238 (DG/YE)

C207

14401

N434
Luggage compartment lid release switch



F02185

Pin	Circuit	Circuit function
1	84 (VT/YE)	Luggage compartment lid release relay, switched power, output
2	931 (OG)	Voltage supplied at all times (overload protected)

C211

14630

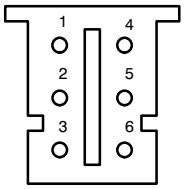

F06257

14A005

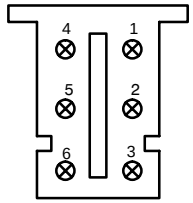

F06138

(1) 194 (PK)
(2) 313 (WH/YE)
(3) 314 (TN/LB)
(4) 1015 (RD/WH)
117 (PK/BK)
(5) 163 (RD/OG)
118 (PK/OG)
(6) 1205 (BK)