C248 (GY)

* Supercrew

14A005/14631

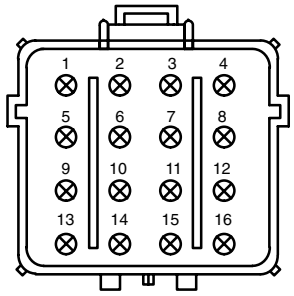

F16087

(1) *57 (BK)
(2) 640 (RD/YE)
(3) 999 (LB/WH)
(4) 140 (BK/PK)
(5) 3 (LG/WH)
(6) 800 (GY/LB)
(7) 875 (BK/LB)
(8) 162 (LG/RD)
(9) 1013 (BN/LG)
(10) 801 (TN/YE)
(11) 813 (LB/WH)
(12) –
(13) 344 (BK/YE)
(14) 956 (OG/LG)
(15) 804 (OG/LG)
(16) 70 (LB/WH)

14401

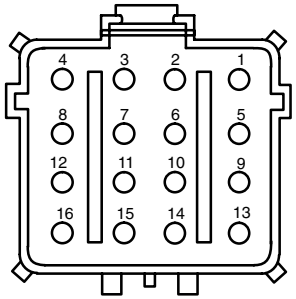

F16067

(1) *57 (BK)
(2) 640 (RD/YE)
(3) 999 (LB/WH)
(4) 140 (BK/PK)
(5) 3 (LG/WH)
(6) *827 (TN/WH)
800 (GY/LB)
(7) 875 (BK/LB)
(8) 162 (LG/RD)
(9) 1013 (BN/LG)
(10) 801 (TN/YE)
(11) 813 (LB/WH)
(12) –
(13) 344 (BK/YE)
(14) 956 (OG/LG)
(15) 804 (OG/LG)
(16) 70 (LB/WH)

C250 (BK)

14401

Ignition switch
(11572)

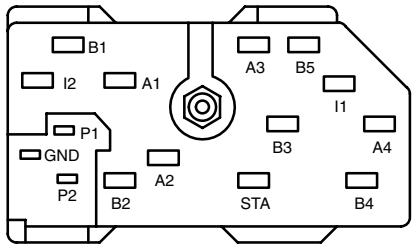

F15014

Pin	Circuit	Circuit function
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
A2	–	not used
A3	1040 (RD/BK)	Voltage in Run (overload protected)
A4	687 (GY/YE)	Voltage in Run (overload protected)
B1	37 (YE)	Voltage supplied at all times (overload protected)
B2	–	not used
B3	37 (YE)	Voltage supplied at all times (overload protected)
B4	1050 (LG/VT)	Voltage supplied at all times (overload protected)
B5	1050 (LG/VT)	Voltage supplied at all times (overload protected)
I1	964 (DB/LG)	Voltage supplied in Start and Run (overload protected)
I2	–	not used
P1	–	not used
P2	–	not used
STA	32 (RD/LB)	Voltage supplied in Start (overload protected)
GND	–	not used