C123

12A581

Y134
EVAP canister
purge valve

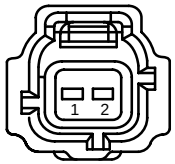

F02105

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	191 (LG/BK)	Powertrain Control Module (PCM) (12A650), EVAP canister purge valve

C124

14A005

N1
Brake fluid level
switch (2L414)

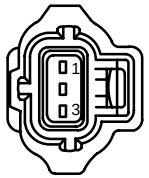

F03247

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	128 (VT/YE)	Brake indicator, control

C125

14A005

M111
Windshield wiper
motor (17508)

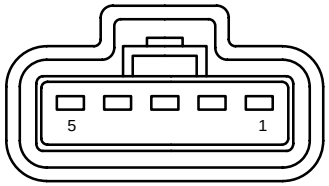

F05119

Pin	Circuit	Circuit function
1	58 (WH)	Wiper high/low relay, switched power, output, High
2	56 (DB/OG)	Wiper high/low relay, switched power, output, Low
3	1205 (BK)	Ground
4	65 (DG)	Voltage in Run or Accessory (overload protected)
5	28 (BK/PK)	Wiper run/park relay, switched power

C128

12B566
12A581

B22
Mass Air Flow
(MAF) sensor
(12B579)

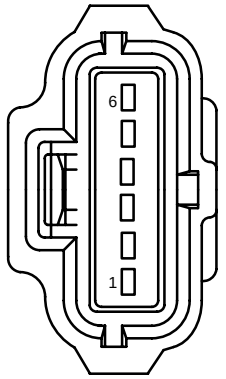

F06077

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	969 (BK)	Mass Air Flow (MAF) sensor (12B579), Ground
4	968 (TN/LB)	Mass Air Flow (MAF) sensor (12B579), signal, return
5	967 (LB/RD)	Mass Air Flow (MAF) sensor (12B579), input
6	743 (GY)	Intake Air Temperature (IAT) sensor (12A697), input

C130

12A581

N412
A/C clutch cycling
pressure switch
(19D594)

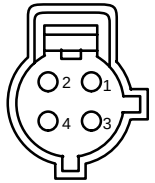

F04195

Pin	Circuit	Circuit function
1	420 (DB/YE)	A/C clutch cycling pressure switch (19D594), to, A/C high pressure switch (19D594)
2	–	not used
3	–	not used
4	348 (VT)	A/C demand signal