C155b

12A581

A7
ABS control module
(2C219)

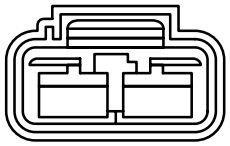

F02463

Pin	Circuit	Circuit function
1	532 (OG/YE)	Voltage supplied at all times (overload protected)
	530 (LG/YE)	Chassis Ground
2	532 (OG/YE)	Voltage supplied at all times (overload protected)
	530 (LG/YE)	Chassis Ground

C160

12A581

B14
Wheel speed sensor, right front
(2C204)

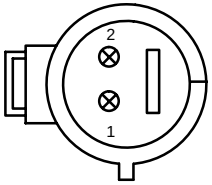

F02072

Pin	Circuit	Circuit function
1	516 (YE/BK)	Wheel speed sensor, right front (2C204) –
2	514 (YE/RD)	Wheel speed sensor, right front (2C204) +

C167

12A581

B234
Digital Transmission Range (DTR) sensor (7F293)

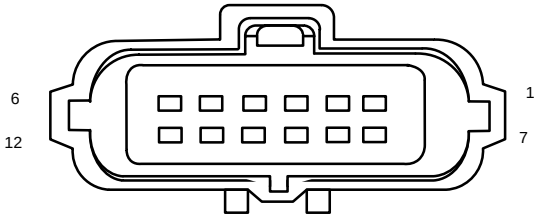

Pin	Circuit	Circuit function
1	–	not used
2	359 (GY/RD)	signal, return
3	199 (LB/YE)	Digital Transmission Range (DTR) sensor, TR3A
4	1144 (YE/BK)	Digital Transmission Range (DTR) sensor, TR1
5	1145 (LB/BK)	Digital Transmission Range (DTR) sensor, TR2
6	1143 (WH/BK)	Digital Transmission Range (DTR) sensor, TR4
7	–	not used
8	–	not used
9	276 (BN)	Voltage in Run (overload protected)
10	325 (DB/OG)	Starter relay (11450), control
11	140 (BK/PK)	Voltage supplied in reverse
12	1093 (TN/RD)	Power, Hot in Start with Park or Neutral