C389

14A698

Safety belt assembly, right

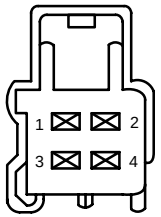

F04105

Pin	Circuit	Circuit function
1	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
2	1514 (RD/BK)	Safety belt buckle switch (10B924), input
3	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
4	1203 (BK/LB)	dedicated ground

C390

19A456

Docking station

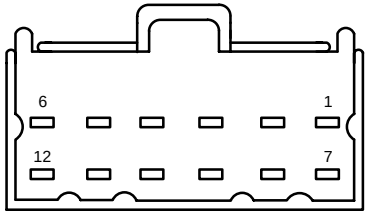

F12019

Pin	Circuit	Circuit function
1	724 (LB/YE)	Radio (18806), to cellular phone, audio –
2	1204 (BK/OG)	Ground
3	720 (RD/YE)	Voltage supplied at all times (overload protected)
4	728 (WH/OG)	On button
5	713 (WH)	Microphone, audio –
6	57 (BK)	phone audio drain
7	725 (PK)	Radio (18806), to cellular phone, audio +
8	723 (GY/RD)	Cellular phone, mute
9	–	not used
10	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
11	714 (VT)	Microphone, audio +
12	57 (BK)	hands free microphone audio drain

C392 (GY)

14A005

Inertia Fuel Shutoff (IFS) switch (9D362)



F03032

Pin	Circuit	Circuit function
1	787 (PK/BK)	Fuel pump, Power
2	787 (PK/BK)	Fuel pump, Power
3	–	not used

C402a (BK)

* wagon

14A005/18C620

Rear window defrost grid (18C618)

F01012

Pin	Circuit	Circuit function
1	185 (BK)	Rear window defrost relay, switched power
	*186 (BN/LB)	Rear window defrost relay, switched power

C402b

14A005/17A413

Rear window defrost grid (18C618)

F01012

Pin	Circuit	Circuit function
1	57 (BK)	Ground