C522

14A488

M259
Exterior rear view mirror, left

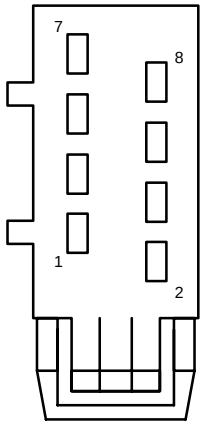

F08112

Pin	Circuit	Circuit function
1	541 (DB)	Up/Down mirror movement
2	–	not used
3	542 (YE)	Mirror motor, feed
4	59 (DG/VT)	Fused rear window defrost relay, switched power
5	1205 (BK)	Ground
6	55 (BK/PK)	Puddle lamp relay, output
7	540 (RD)	Right/Left mirror movement
8	–	not used

C523

14A488

Y28
Speaker, left front (18808)

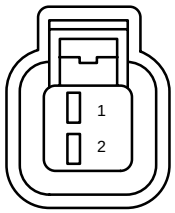

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524

14A488

M80
Power window motor, driver side front (23395)

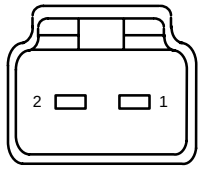

F02381

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	991 (TN/LB)	Master window adjust switch (14529), feed, Down

C525

14A584

M241
Door lock actuator, left front



F02383

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	163 (RD/OG)	Driver door unlock relay, switched power

C526

14A584

N84
Door ajar switch, left front



F02221

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	765 (YE/BK)	Door ajar switch, left front