C906

14334

E31
Vanity mirror lamp, right (04100)

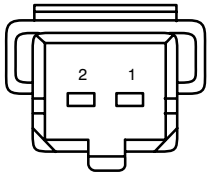

F02217

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	705 (LG/OG)	Battery saver relay, switched power

C907

14334

E30
Vanity mirror lamp, left (04100)

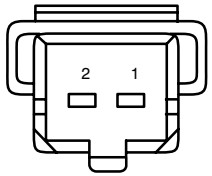

F02217

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	705 (LG/OG)	Battery saver relay, switched power

C910

14334

N441
Map reading lamp switch, left front

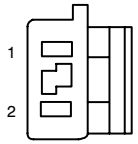

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	705 (LG/OG)	Battery saver relay, switched power

C911

14334

A222
Electrochromatic inside mirror unit (17700)



F07075

Pin	Circuit	Circuit function
1	298 (VT/OG)	Voltage in Run (overload protected)
2	57 (BK)	Ground
3	140 (BK/PK)	Voltage supplied in reverse
4	–	not used
5	–	not used
6	–	not used
7	–	not used

C929

14334

E238
Interior/map lamps assembly, front

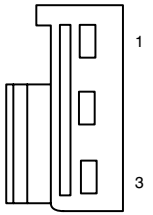

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power