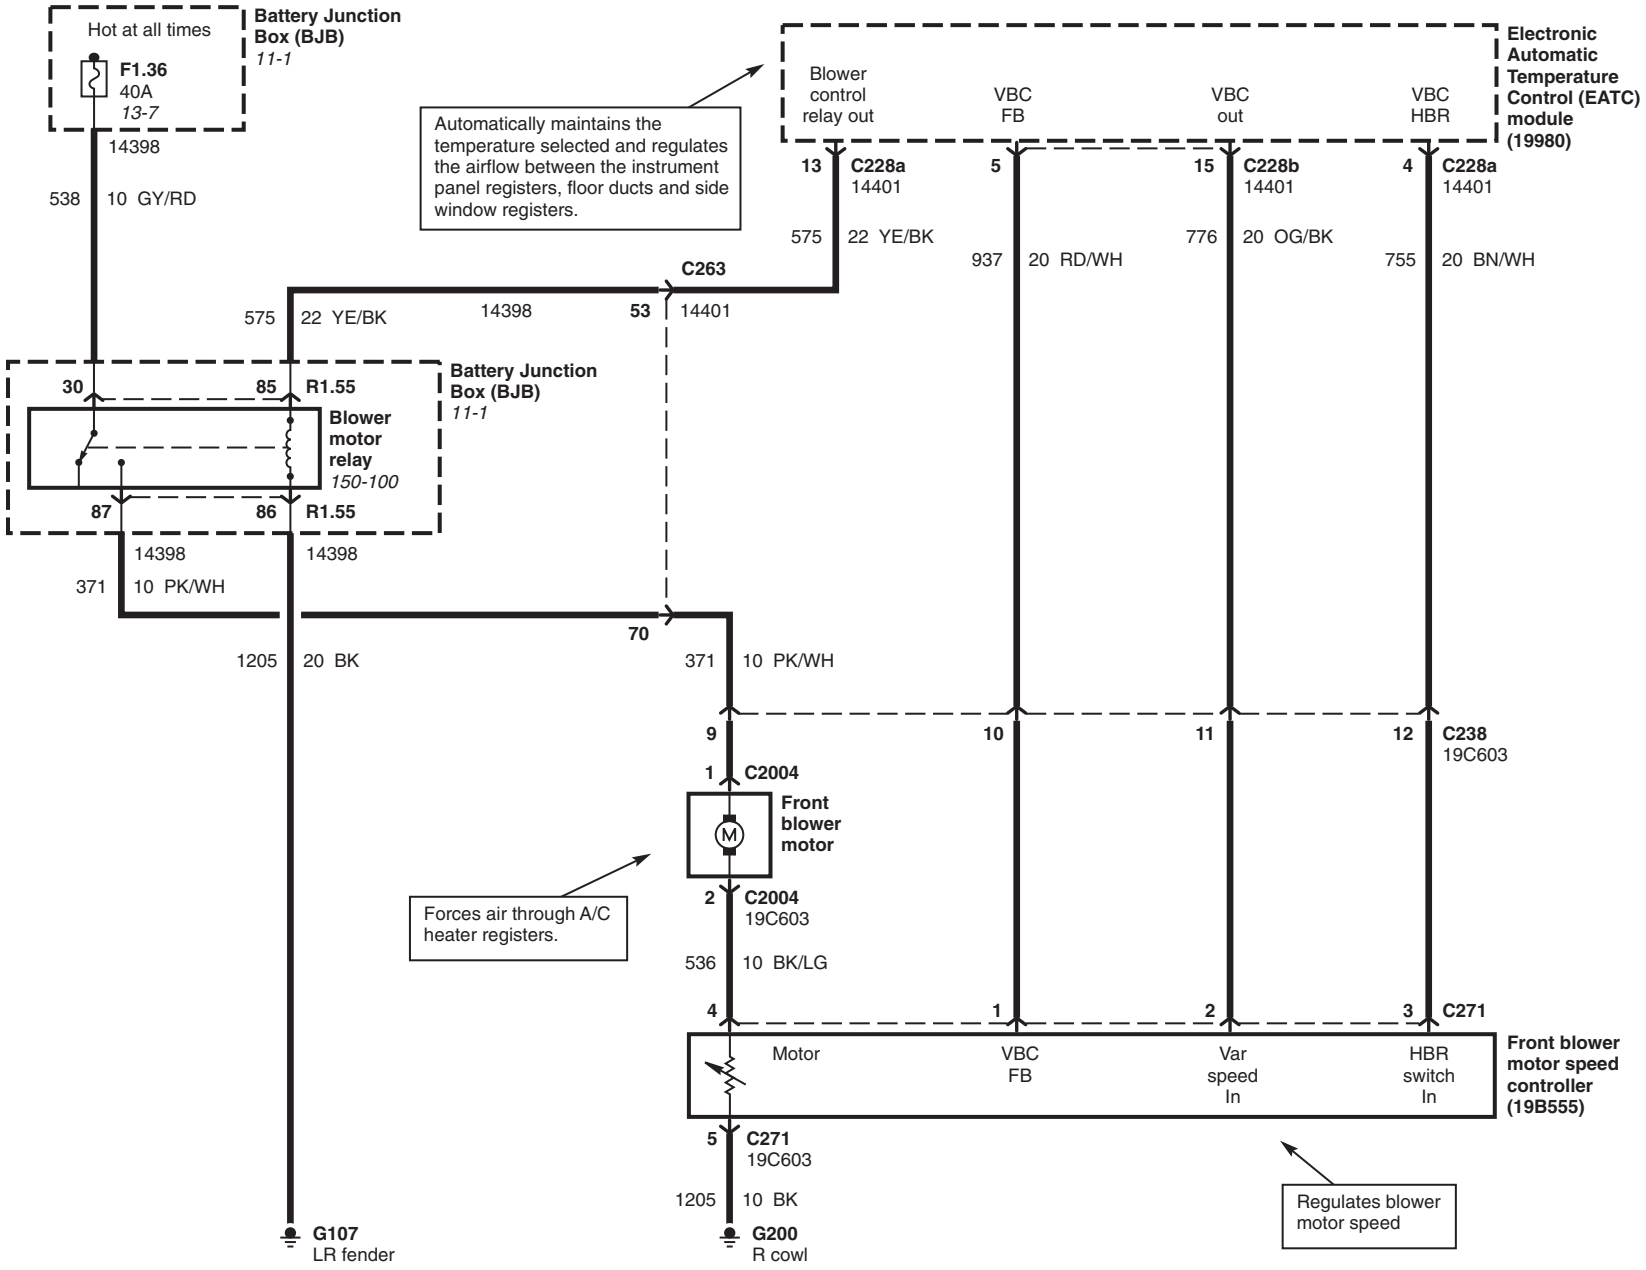
Hot at all times
Battery Junction Box (BJB)
11-1
F1.36
40A
13-7
14398
538 10 GY/RD
Automatically maintains the temperature selected and regulates the airflow between the instrument panel registers, floor ducts and side window registers.
Electronic Automatic Temperature Control (EATC) module (19980)
Blower control relay out
VBC FB
VBC out
VBC HBR
13 C228a 14401
5
15 C228b 14401
4 C228a 14401
575 22 YE/BK
937 20 RD/WH
776 20 OG/BK
755 20 BN/WH
C263
575 22 YE/BK
14398
53 14401
30
85 R1.55
Battery Junction Box (BJB)
11-1
Blower motor relay
150-100
87
86 R1.55
14398
14398
371 10 PK/WH
70
1205 20 BK
371 10 PK/WH
9
10
11
12 C238 19C603
1 C2004
Front blower motor
2 C2004 19C603
536 10 BK/LG
Forces air through A/C heater registers.
4
1
2
3 C271
Motor
VBC FB
Var speed In
HBR switch In
Front blower motor speed controller (19B555)
5 C271 19C603
1205 10 BK
Regulates blower motor speed
G107
LR fender
G200
R cowl