101-7 ROOF OPENING PANEL/VENT WINDOWS

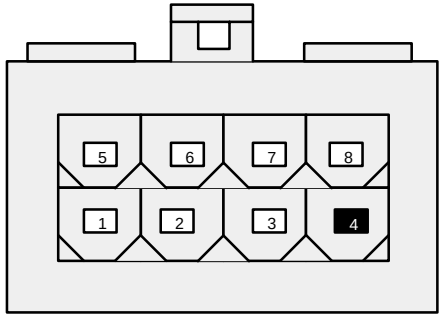

C919 (WHITE)
ROOF OPENING PANEL ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	(BK/WH)	Module to Motor–LS Common
2	(WH/RD)	Switch (Open) to Module
3	(BN/OG)	Switch to Module–Common
4	–	NOT USED
5	(TN/RD)	Switch (Closed) to Module
6	(BK)	Module to Motor–Flush
7	(RD)	Module to Motor–Range
8	(WH)	Module to Motor–Soft Stop

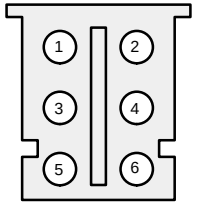

C920 (BROWN)
ROOF OPENING PANEL MOTOR ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	(BK)	Control Unit to Limit Switch 3
2	(WH)	Control Unit to Limit Switch 1
3	(RD)	Control Unit to Limit Switch 2
4	(VT)	Control Unit to Roof Opening Panel Motor
5	(BK/WH)	Limit Switch Common
6	(BU)	Control Unit to Roof Opening Panel Motor