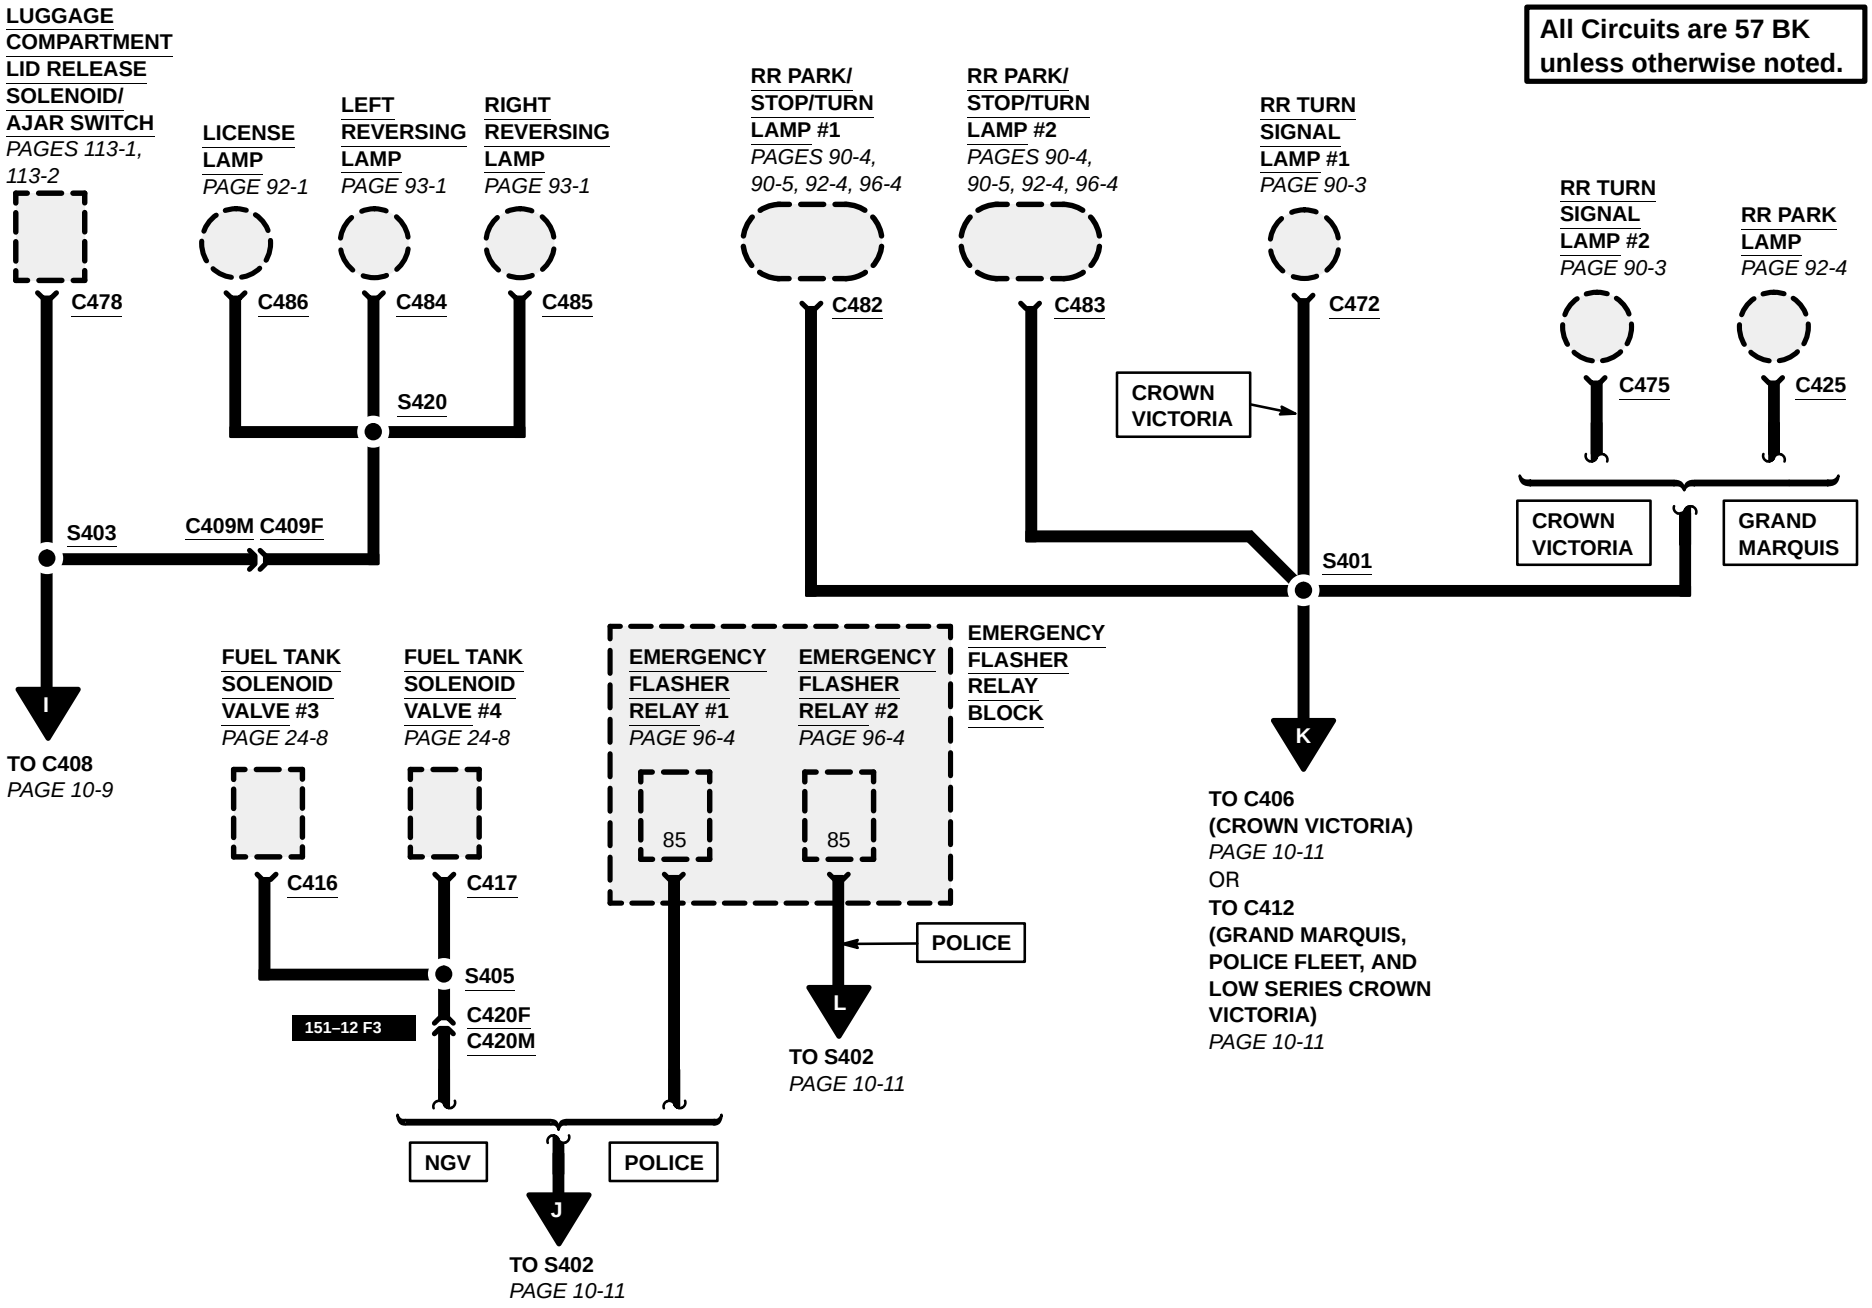
All Circuits are 57 BK unless otherwise noted.
LUGGAGE COMPARTMENT LID RELEASE SOLENOID/ AJAR SWITCH
PAGES 113-1, 113-2
C478
S403
TO C408
PAGE 10-9
LICENSE LAMP
PAGE 92-1
C486
LEFT REVERSING LAMP
PAGE 93-1
C484
RIGHT REVERSING LAMP
PAGE 93-1
C485
S420
C409M C409F
RR PARK/ STOP/TURN LAMP #1
PAGES 90-4, 90-5, 92-4, 96-4
C482
RR PARK/ STOP/TURN LAMP #2
PAGES 90-4, 90-5, 92-4, 96-4
C483
RR TURN SIGNAL LAMP #1
PAGE 90-3
C472
CROWN VICTORIA
S401
K
TO C406 (CROWN VICTORIA)
PAGE 10-11
OR
TO C412 (GRAND MARQUIS, POLICE FLEET, AND LOW SERIES CROWN VICTORIA)
PAGE 10-11
RR TURN SIGNAL LAMP #2
PAGE 90-3
C475
RR PARK LAMP
PAGE 92-4
C425
CROWN VICTORIA
GRAND MARQUIS
FUEL TANK SOLENOID VALVE #3
PAGE 24-8
C416
FUEL TANK SOLENOID VALVE #4
PAGE 24-8
C417
S405
151–12 F3
C420F
C420M
EMERGENCY FLASHER RELAY #1
PAGE 96-4
85
EMERGENCY FLASHER RELAY #2
PAGE 96-4
85
EMERGENCY FLASHER RELAY BLOCK
POLICE
L
TO S402
PAGE 10-11
NGV
POLICE
J
TO S402
PAGE 10-11