C341c

14B719

A207
Driver seat module

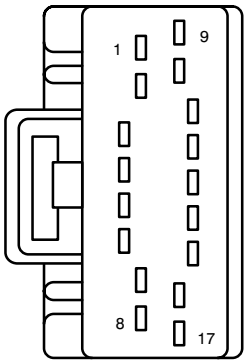

F17005

Pin	Circuit	Circuit Function
1	4-AH80 (GY/WH)	Data link, bus positive
2	91-AH80 (BN/WH)	Ground
3	10-AH83 (GY/OG)	Signal 2 (Y–direction, reverse, downward)
4	10-AH82 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
5	8-AH84 (WH/BK)	Sensor signal
6	10-AH85 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
7	–	not used
8	–	not used
9	5-AH80 (BU/OG)	Data link, bus negative
10	29-AH80 (OG/WH)	Voltage supplied at all times (overload protected)
11	8-AH83 (WH/GN)	Sensor signal
12	8-AH82 (WH/RD)	Sensor signal
13	10-AH84 (GY/BK)	Signal 2 (Y–direction, reverse, downward)
14	8-AH85 (WH/VT)	Sensor signal
15	–	not used
16	–	not used
17	–	not used

C342

13K702

N28
Seat heater switch, right front

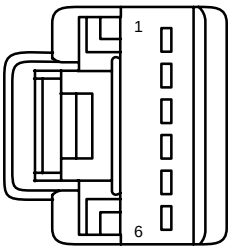

F06179

Pin	Circuit	Circuit Function
1	31S-HC18 (GN/YE)	Ground, Switched
2	–	not used
3	20-HC9 (OG/GN)	Voltage, hot in run only
4	20S-HC22 (DB/GN)	Voltage, hot in run only, Switched
5	31-HC9 (WH/OG)	Ground
6	64S-HC9 (OG/BK)	Variable D.C. voltage (not overload protected), Switched

C344

13K702

N27
Seat heater switch, left front

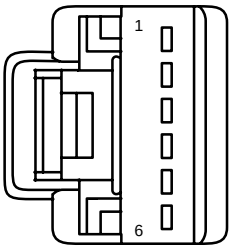

F06179

Pin	Circuit	Circuit Function
1	31S-HC15 (WH/VT)	Ground, Switched
2	–	not used
3	20-HC6 (OG/GN)	Voltage, hot in run only
4	20S-HC21 (BK/YE)	Voltage, hot in run only, Switched
5	31-HC6 (WH/OG)	Ground
6	64S-HC6 (OG/BK)	Variable D.C. voltage (not overload protected), Switched