C420a

14A005

A212
Rear Electronic
Module (REM)

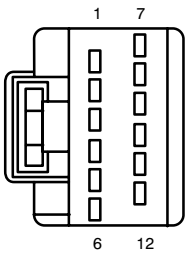

F12077

Pin	Circuit	Circuit Function
1	75-GL58 (YE/GN)	Voltage: Ignition switch in Accessory or Run
2	–	not used
3	–	not used
4	–	not used
5	31S-LF12 (BK/GN)	Ground, Switched
6	–	not used
7	–	not used
8	15-RP12B (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
9	8-AA30 (WH)	Sensor signal
10	–	not used
11	31S-LB25 (BK/BU)	Ground, Switched
12	–	not used

C420b

14A005

A212
Rear Electronic
Module (REM)

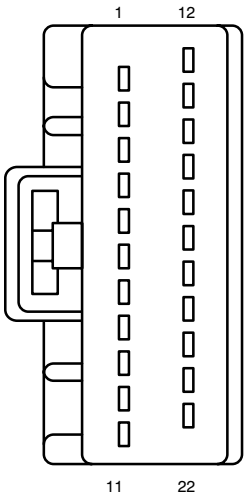

F22003

Pin	Circuit	Circuit Function
1	4-EG12 (GY/WH)	Data link, bus positive
2	5-EG12 (BU/OG)	Data link, bus negative
3	–	not used
4	8-AD15 (WH/BU)	Sensor signal
5	7-AJ1 (YE)	Voltage D.C. supplied at all times (sensor)
6	–	not used
7	91S-HB23 (BN/WH)	Ground, Switched
8	–	not used
9	–	not used
10	–	not used
11	–	not used
12	31-DK30H (BK/OG)	Ground
13	29S-DK30 (OG)	Voltage supplied at all times (overload protected), Switched
14	8-GL20 (WH/BK)	Sensor signal
15	–	not used
16	–	not used
17	–	not used
18	–	not used
19	–	not used
20	–	not used
21	–	not used
22	–	not used