Lumbar, Switches

Schematic

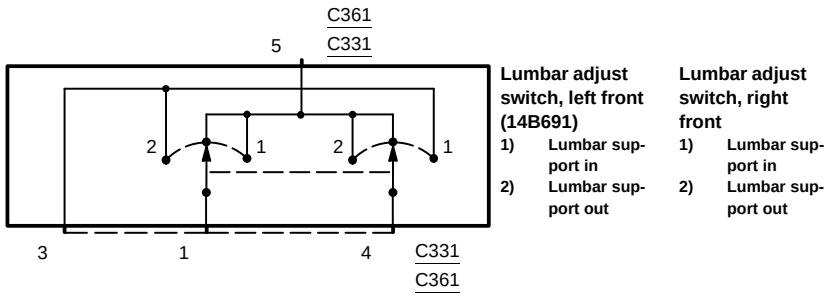

Lumbar adjust switch, left front (14B691)

1) Lumbar support in
2) Lumbar support out

Lumbar adjust switch, right front

1) Lumbar support in
2) Lumbar support out

Terminals

C361
C331

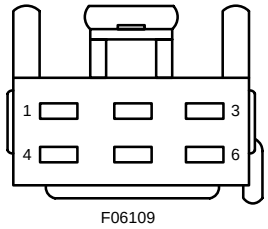

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Lumbar circuit	5 and 1	In	Closed circuit
		Out	Open circuit
	4 and 3	In	Closed circuit
		Out	Open circuit
	5 and 4	In	Open circuit
		Out	Closed circuit
	1 and 3	In	Open circuit
		Out	Closed circuit