C4107 (WH)

13A409

Auxiliary blower motor resistor assembly (19A706)

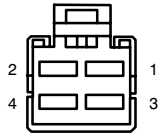

F04361

Pin	Circuit	Circuit function
1	756 (RD/PK)	Auxiliary blower motor (19805), Low
2	269 (LB/OG)	Auxiliary blower motor (19805), medium low
3	751 (DB/WH)	Auxiliary blower motor (19805), medium high
4	515 (OG/RD)	Auxiliary blower motor (19805), speed control

C4116 (BK)

14405

EVAP canister vent control solenoid

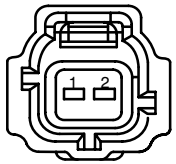

F02101

Pin	Circuit	Circuit function
1	391 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	91 (VT/WH)	Canister vent

C4168 (GY)

13A409

Inertia Fuel Shutoff (IFS) switch (9D362)



F03239

Pin	Circuit	Circuit function
1	238 (DG/YE)	Fuel pump relay, switched power, output
2	787 (PK/BK)	Fuel pump, Power
3	–	not used

C4169 (WH)

13A409

Air suspension service switch (5K761)



F03301

Pin	Circuit	Circuit function
1	429 (VT/LG)	Air suspension height sensor (3C131), rear, feed
2	–	not used
3	418 (DG/YE)	Air suspension service switch (5K761), signal

C4172 (BK)

13A409

Liftgate obstacle detection strip, left

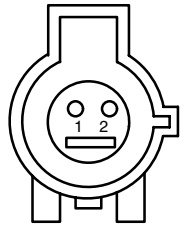

F02078

Pin	Circuit	Circuit function
1	1967 (GY/OG)	Liftgate obstacle detection strip, Signal return
2	1966 (LB/BK)	Liftgate obstacle detection strip, left, signal

C4173 (BK)

13A409

Liftgate obstacle detection strip, right

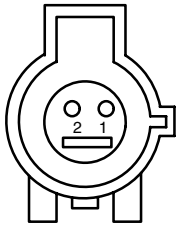

F02078

Pin	Circuit	Circuit function
1	1965 (VT)	Liftgate obstacle detection strip, right, signal
2	1967 (GY/OG)	Liftgate obstacle detection strip, Signal return