C806

14632

N432
Sliding door contact switch, right

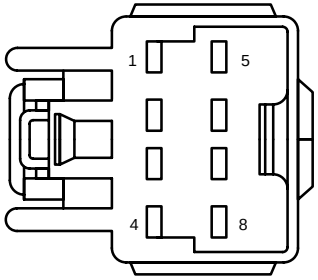

F08132

Pin	Circuit	Circuit function
1	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Lock
2	825 (TN/LG)	Speaker, right rear (18808) +
3	–	not used
4	1251 (YE/RD)	Power sliding door motor, return
5	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock
6	803 (BN/PK)	Speaker, right rear (18808) –
7	1227 (WH)	Detent switch, RH, to, Module, power sliding door, RH side
8	1252 (GY/RD)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH

C807

14632

N432
Sliding door contact switch, right

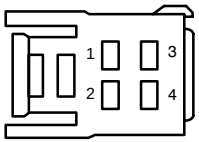

F04106

Pin	Circuit	Circuit function
1	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Lock
2	825 (TN/LG)	Speaker, right rear (18808) +
3	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock
4	803 (BN/PK)	Speaker, right rear (18808) –

C808

14632

M213
Door lock actuator assembly, right sliding door

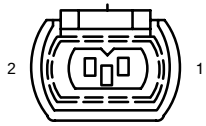

F02116

Pin	Circuit	Circuit function
1	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Lock
2	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, right sliding door, Unlock

C809

14632

N601
Latch reverse actuator, right power sliding door



F02482

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	1252 (GY/RD)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH

C811

14632

N334
Detent switch, RH

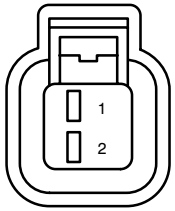

F02069

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	1227 (WH)	Detent switch, RH, to, Module, power sliding door, RH side