149-1 COMPONENT TESTING: INTRODUCTION/MAIN LIGHT SWITCH

INTRODUCTION

Component testing procedures are provided to determine whether or not a component operates properly.

Testing information for each component includes a schematic with component terminal locations and step-by-step test procedures. Component terminals are identified by:

1. the circuit number of the wires that connect to that terminal,
2. the wire insulation color, and
3. letters or numbers that may be marked on the component.

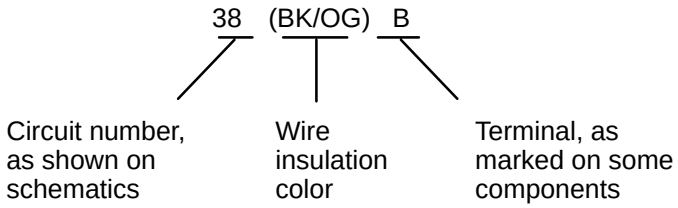

The component connector MUST BE REMOVED before testing. To test a single circuit within the component, select that circuit under the column TO TEST. If you wish to test the complete component, perform all tests.

Connect the tester to the terminals shown in the second column and operate the component as shown in the third column.

TERMINALS

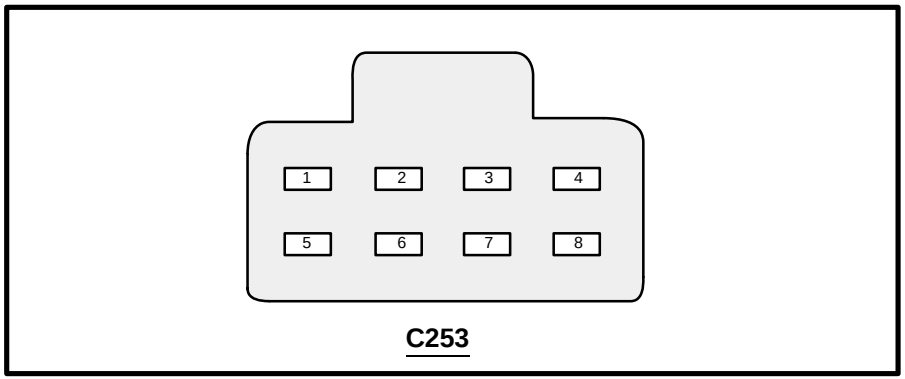

COMPONENT TESTING PROCEDURE

TO TEST	Connect Self-Powered Test Light or Ohmmeter to Terminals	Move Switch to These Positions	A Good Switch Will Indicate
Headlamp Circuit	4 and 2	**Autolamp** **Off** **Park** **Head**	Open Circuit Open Circuit Open Circuit 1.2K ohm
Park Circuit	8 and 2	**Autolamp** **Off** **Park** **Head**	Open Circuit Open Circuit 1.2K ohm Open Circuit
Off Circuit	7 and 2	**Autolamp** **Off** **Park** **Head**	Open Circuit 1.2K ohm Open Circuit Open Circuit
Autolamp Circuit	5 and 2	**Autolamp** **Off** **Park** **Head**	1.2K ohm Open Circuit Open Circuit Open Circuit
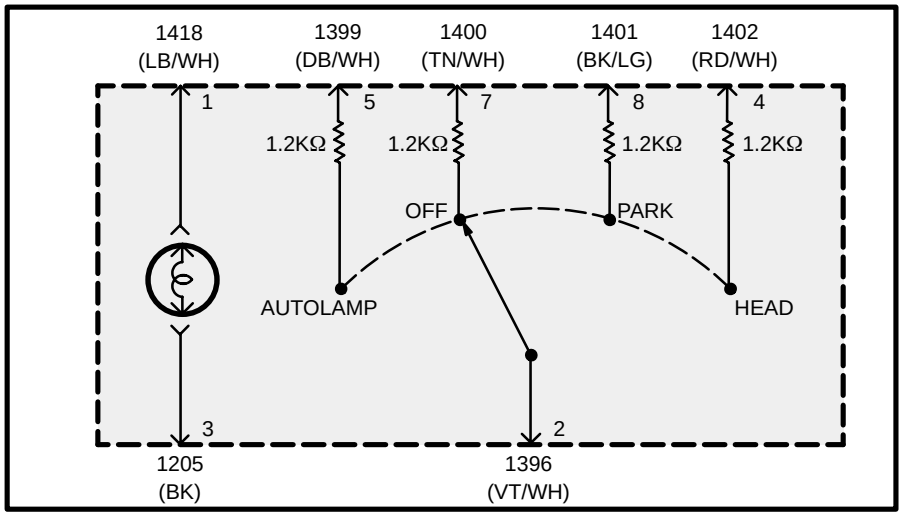
SCHEMATIC