C286

19A657

Sunload sensor
(19E663)

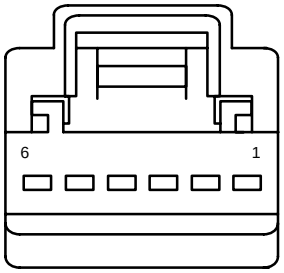

F06128

Pin	Circuit	Circuit function
1	8-FA53 (WH/BU)	Sunload sensor (19E663), signal
2	8-LE42 (WH/BU)	Autolamp sensor (13A018)
3	29-GL6 (OG)	Voltage supplied at all times (overload protected)
4	10-GL6 (GY/VT)	Anti–theft ON indicator
5	31-LE42 (BK/OG)	Ground
6	10-FA53 (GY/VT)	Sunload sensor (19E663), signal

C288

19D887

Heater blower motor
(19805)

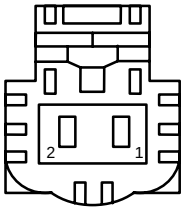

F02025

Pin	Circuit	Circuit function
1	30S-FA18 (RD/BK)	Voltage supplied at all times (not overload protected), Switched
2	31S-FA18 (BK/RD)	Ground, Switched

C289

19D887

Fresh/recirculation
door actuator
(19E616)

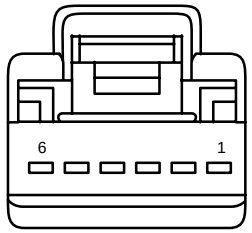

F06179

Pin	Circuit	Circuit function
1	33-FB8 (YE/RD)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB8 (WH/RD)	Sensor signal
4	7-FB8 (YE/RD)	Voltage DC supplied at all times (sensor)
5	9-FB8 (BN/RD)	Sensor signal return (reference/ground)
6	32-FB8 (WH/RD)	Switched between: Battery voltage, Ground or Open