C116

* Marauder

12B637

Coil On Plug (COP)
6 (12A366)

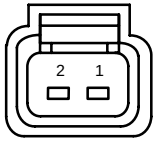

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	*1025 (OG/YE)	Coil On Plug (COP) 6 (12A366), control
2	1025 (OG/YE)	Coil On Plug (COP) 6 (12A366), control
	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C117

* Marauder

12B637

Coil On Plug (COP)
7 (12A366)

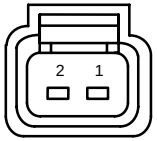

F02331

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
	*1027 (PK/LB)	Coil On Plug (COP) 7 (12A366), control
2	1027 (PK/LB)	Coil On Plug (COP) 7 (12A366), control
	*16 (RD/LG)	Voltage supplied in Start and Run (overload protected)