C1206

12B637

P89
Coil On Plug (COP)
9

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1142 (WH/RD)	control

C1207

12B637

P150
Coil On Plug (COP)
10

F02371

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control

C1210

12A581

B269
Air filter sensor



F02501

Pin	Circuit	Circuit function
1	142 (LB/RD)	to Instrument cluster
2	57 (BK)	Ground

C1220

15525

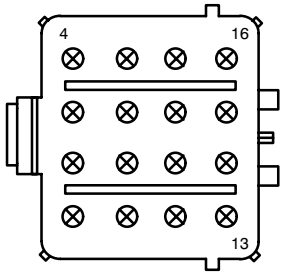

F16093

14405

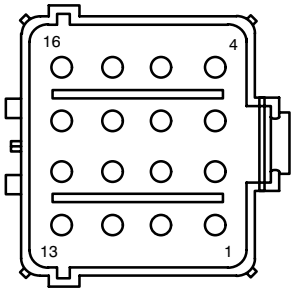

F16020

(1) 523 (RD/PK)
(2) 519 (LG/BK)
(3) 9 (LG/OG)
(4) 5 (OG/LB)
(5) 64 (DG)
(6) 52 (YE)
(7) 511 (LG)
(8) 351 (BN/WH)
(9) 791 (RD/PK)
(10) 359 (GY/RD)
(11) –
(12) –
(13) 392 (RD/LG)
(14) 389 (WH/BK)
(15) 391 (RD/YE)
(16) –